 
 
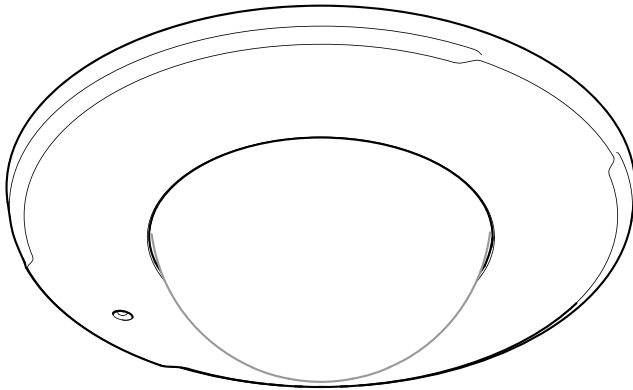 


AXIS Retrofit kit for T94K01L/T94K02L

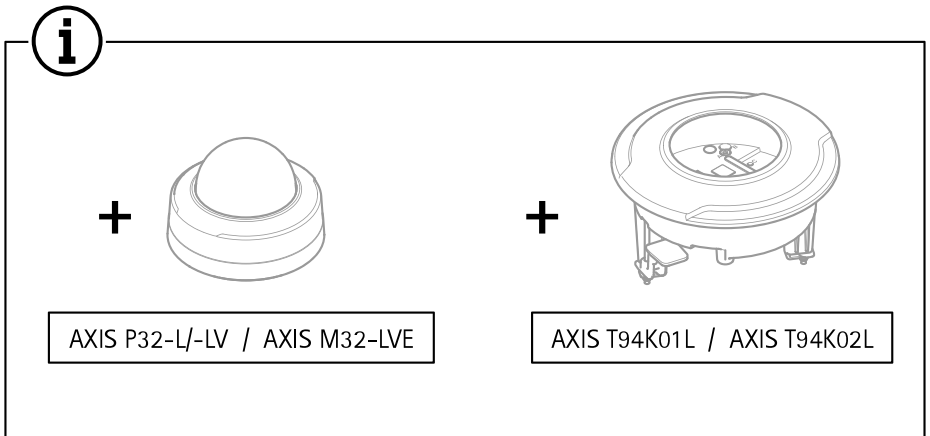 


Installation Guide


AXIS Retrofit kit for T94K01L/T94K02L

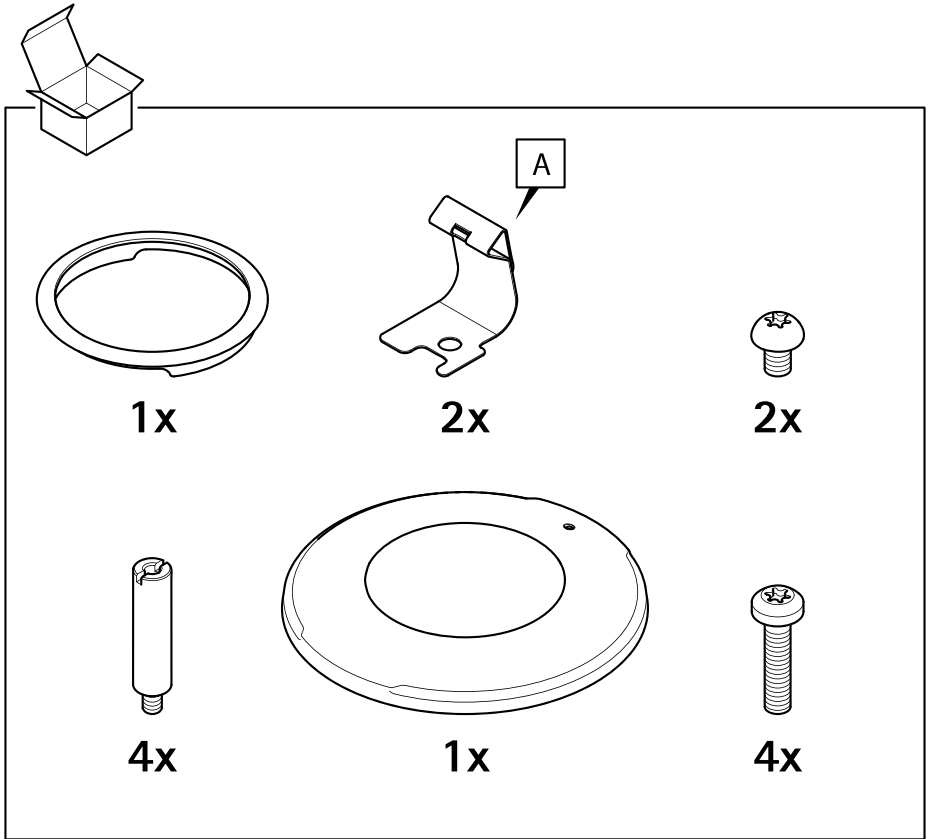


1.1

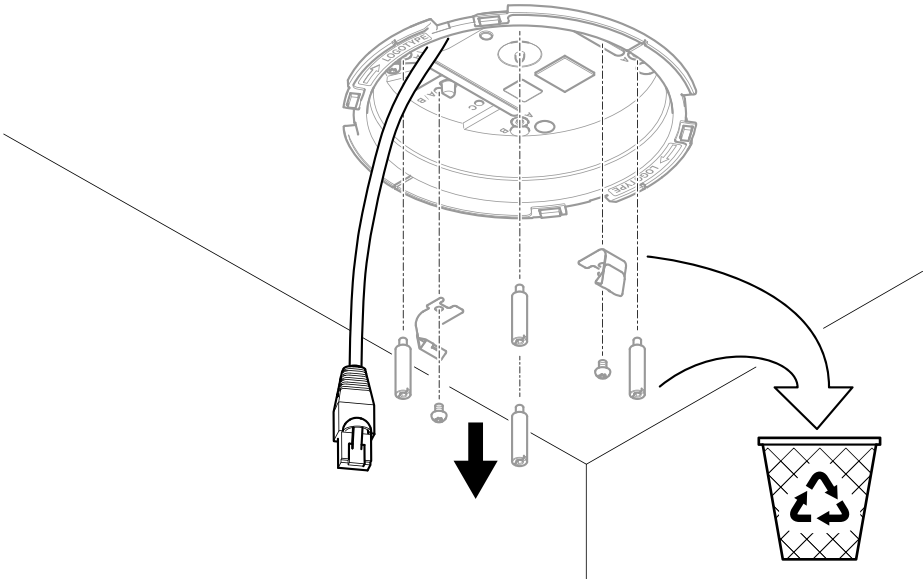

 
1.2

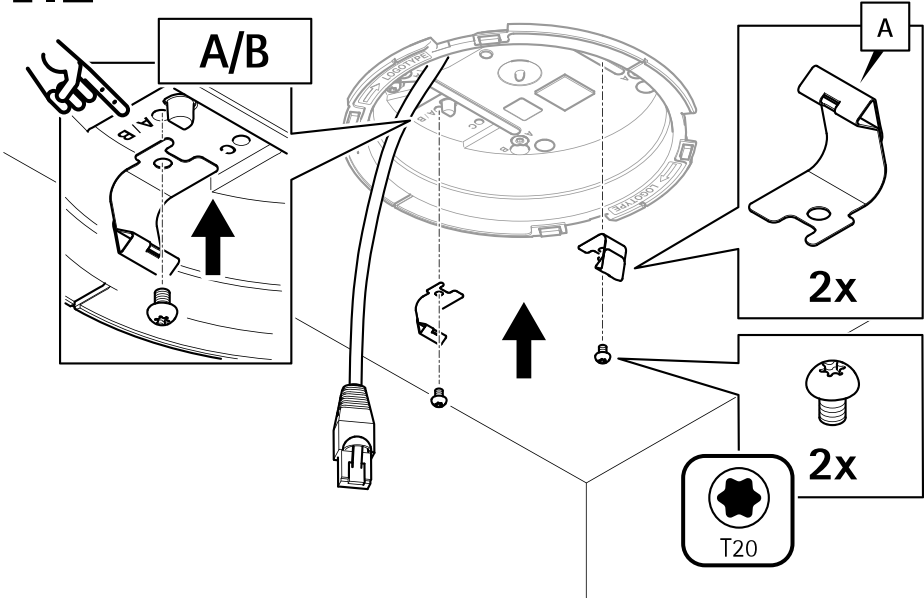

 
1.3

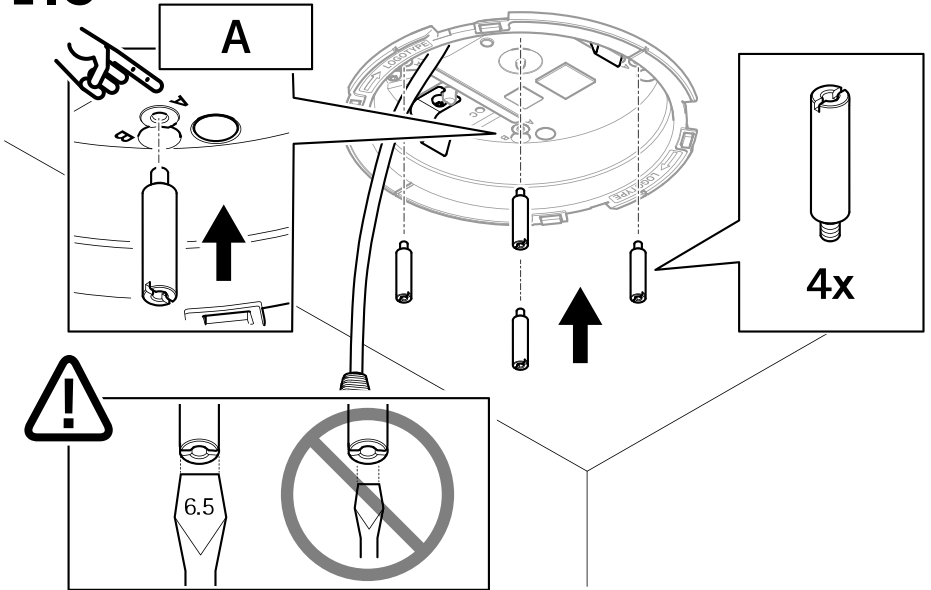

 
1.4

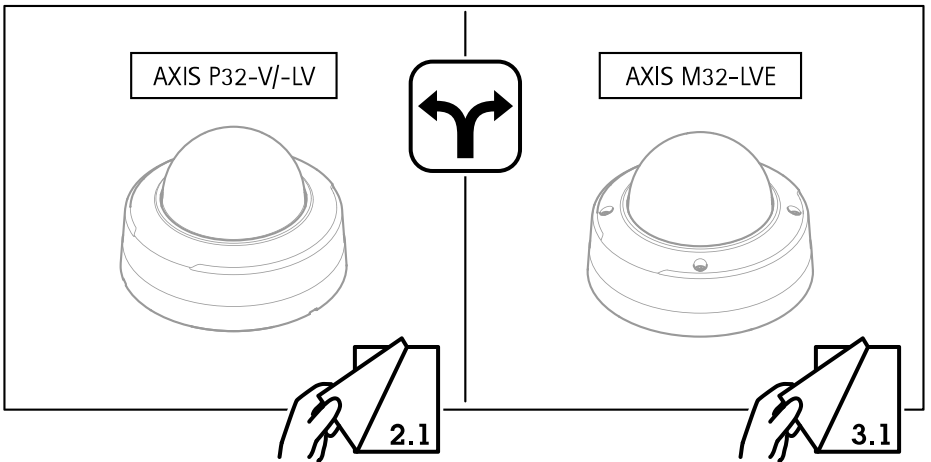

 
2.1 AXIS P32-V/-LV

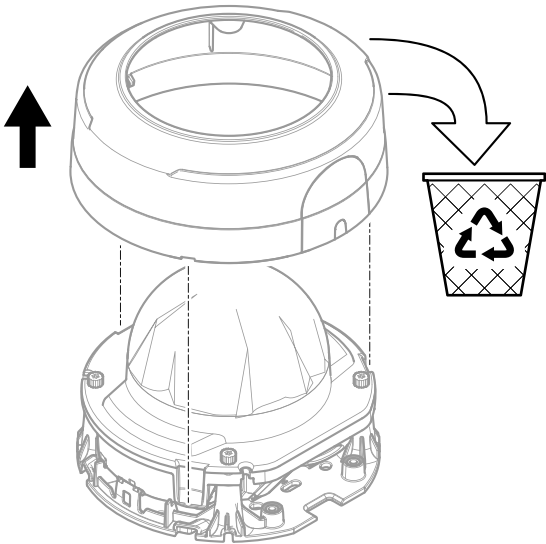

 2.2 AXIS P32-V/-LV

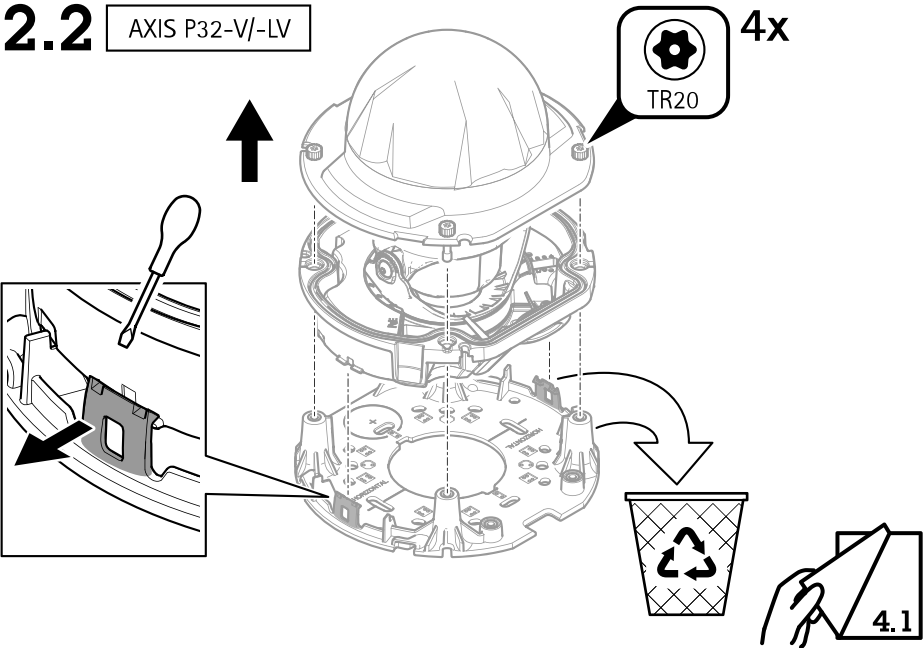

 3.1 AXIS M32-LVE

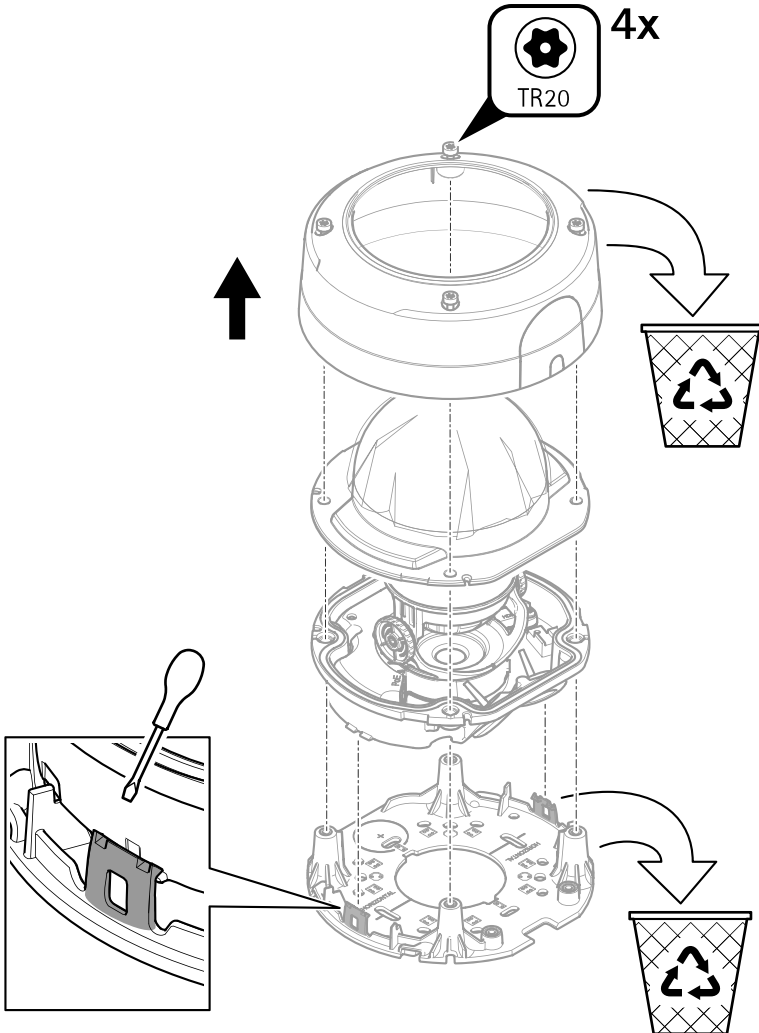


AXIS Retrofit kit for T94K01L/T94K02L

4.1


AXIS P32-V/-LV

 AXIS M32-LVE

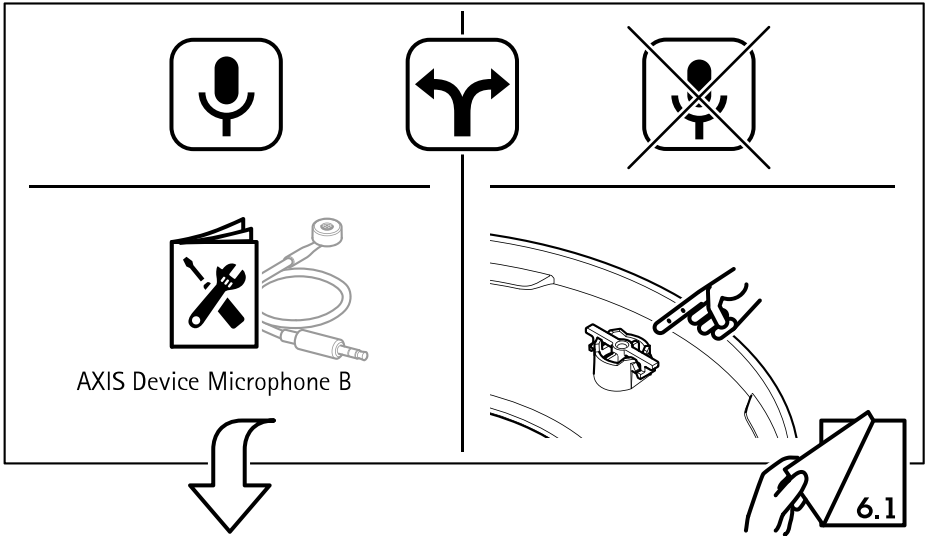


5.1

 
AXIS P324x-LV

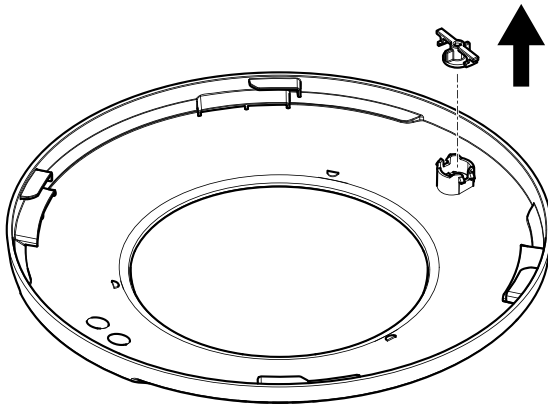

 
6.1

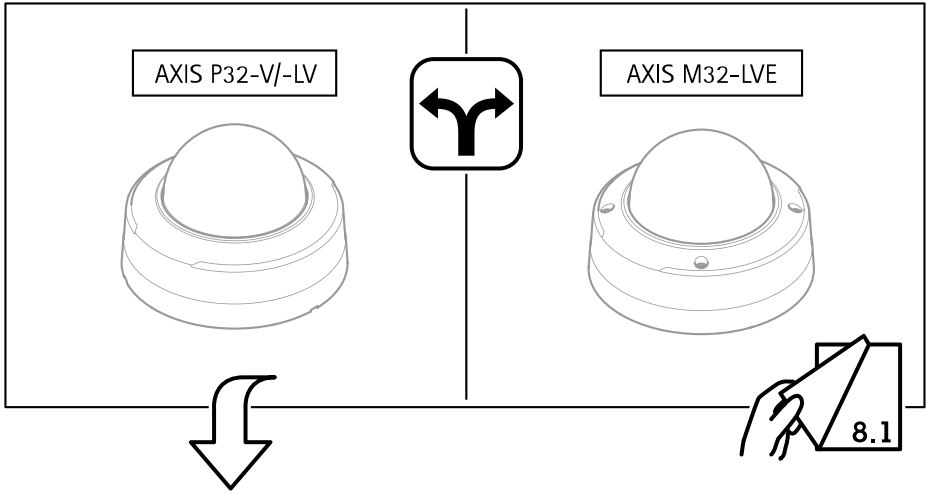

 
7.1

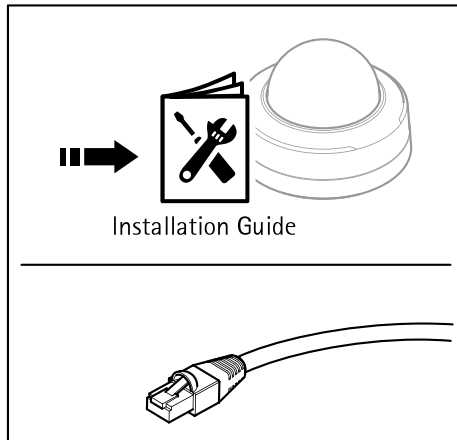AXIS P32-V/-LV

 
7.2 AXIS P32-V/-LV

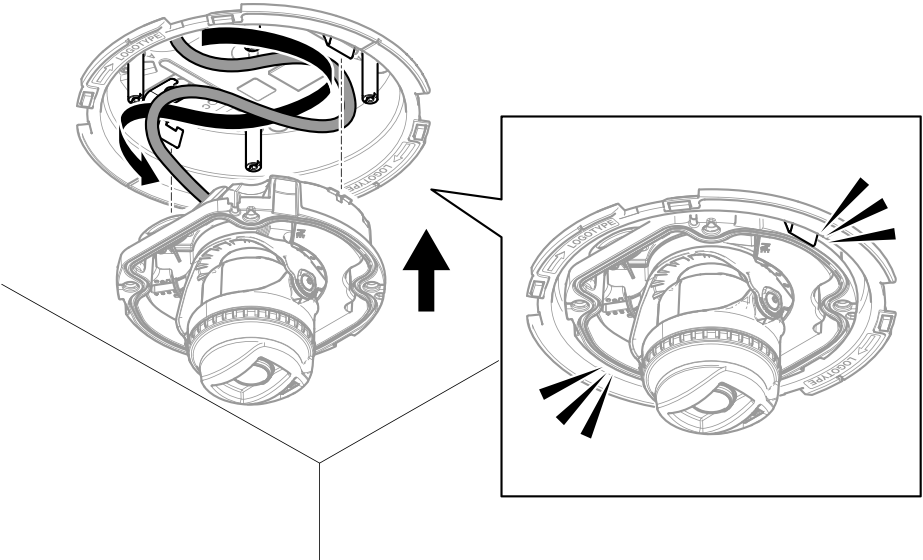

 
7.3 AXIS P32-V/-LV

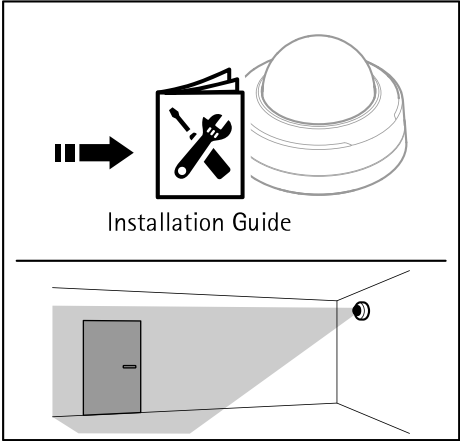

 
7.4 AXIS P32-V/-LV

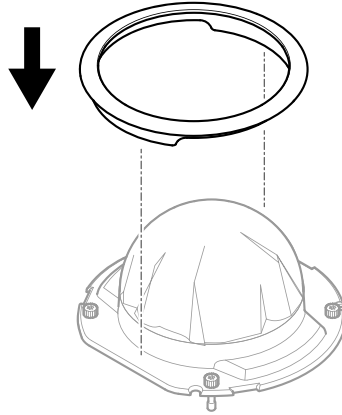

 
7.5 AXIS P32-V/-LV

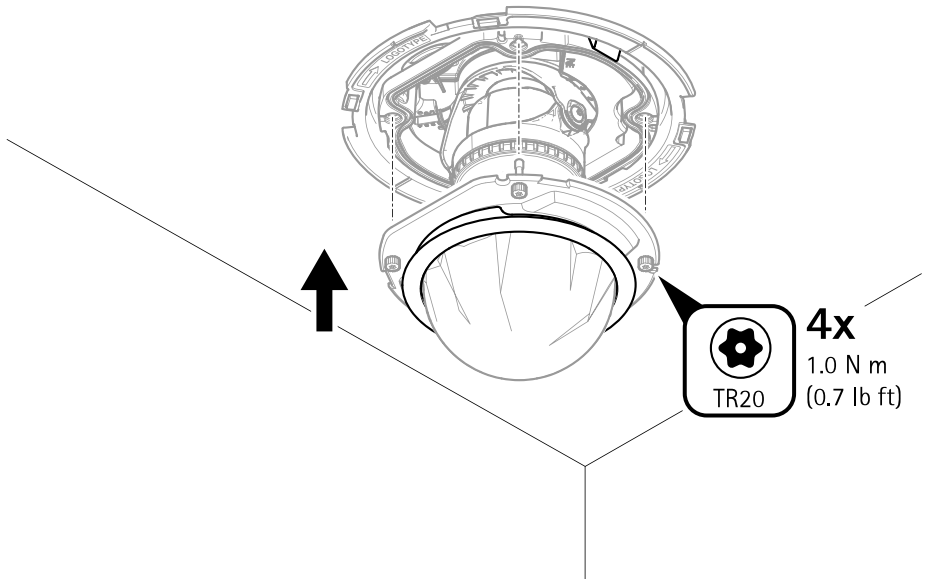

 
7.6 AXIS P32-V/-LV

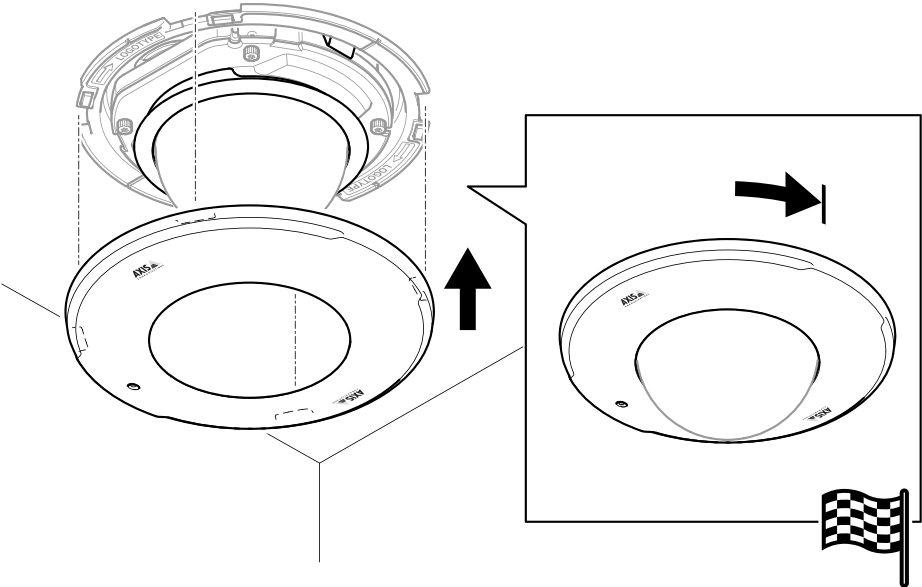

 
8.1 AXIS M32-LVE

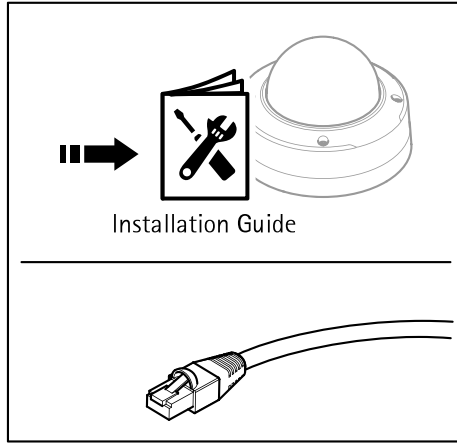

 
8.2 AXIS M32-LVE

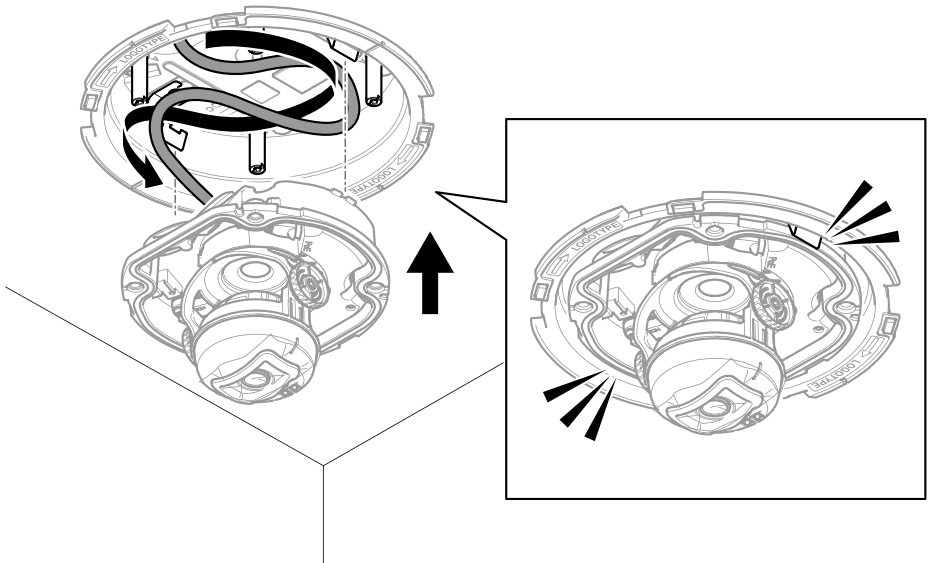

 
8.3 AXIS M32-LVE

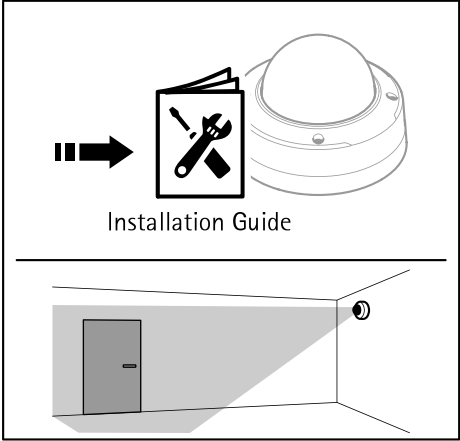

 8.4 AXIS M32-LVE

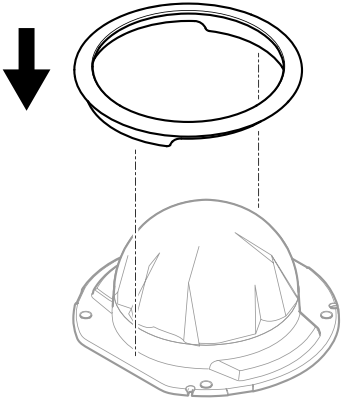

 8.5 AXIS M32-LVE

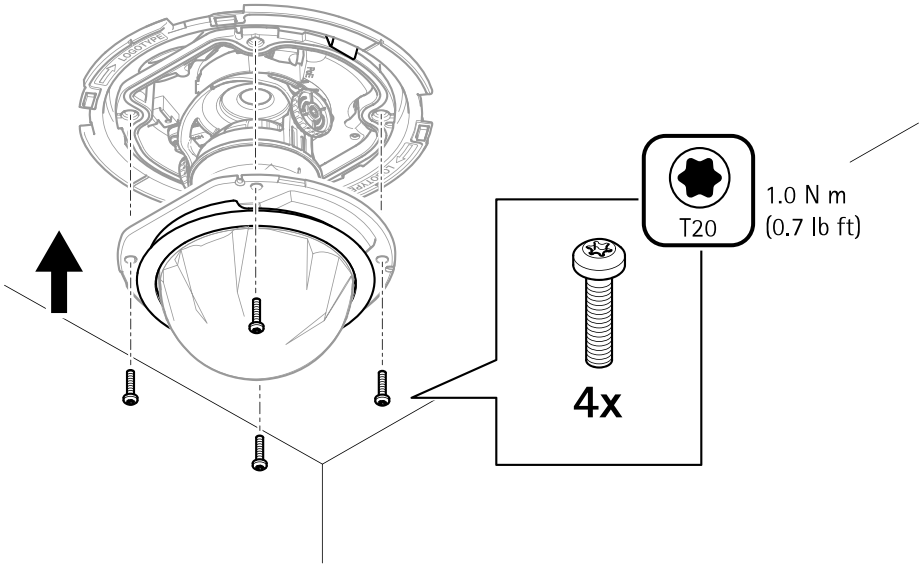

8.6 AXIS M32-LVE

