 
 


## Synergy 21 LED light panel Angel Wings V2 Ersatz Fernbedienung

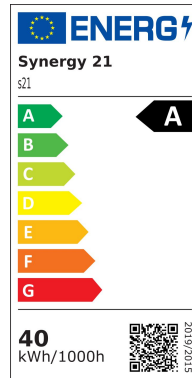

kwh/1000h:	40,00
Lumens:	3200
Watt:	40,0
Nominal Service Life:	50000 Std.
Switching Cycles:	50000
Opt. Ambient Temperature.:	25 °C

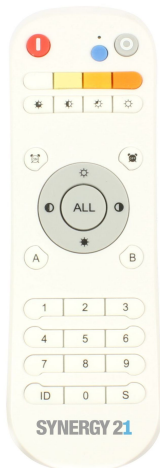

Replacement remote control for Angel Wing V2

How to connect this remote control to the Angel Wing Panel 149407:

1. de-energise the Angel Wing panel.
2. switch the panel on again
3. within 10 seconds, please carry out the following:  
Press the desired zone number (0-99) and the ID button  
Press the desired zone number (0-99) and press the ID button  
(it is very important that you carry out this step twice)  
the panel will now flash once briefly.
4. de-energise the panel again (within the 10 seconds)
5. the login process is complete
6. switch the panel back on and operate it with the remote control

## Additional Images

## DIGITAL LIGHTING CONTROLLERS INSTRUCTION

### Introduction of Multifunction Remote Controller & Simplified Remote Controller:

**Power:** AA battery(s). **Dimension:** 48x26x16. **Effective Distance:** 20M (without obstacles)

**Number of controllable lamps:** 1 controller can control 10 groups of lamps, and no limit to the number of lamps in one group.

**ID of Lamp:** 10 different codes for 1 to 10.

**Multifunction:** ON/OFF, Dimming and Color-temp adjusting using ON/OFF, 2 scenes recall auto dimming, night light.

**Copy the ID of Remote Controller:** Every remote controller has its ID number. One controller can copy and save the ID number of another controller to control the same lamps, and receive its unique ID number.

### Operating method:

**Steps of setting ID number of lamps:**

1. Turn OFF the lamp to which to ID number, then turn on lamp. Mark step 2, 3 within 15 seconds.

2. Press 1 or 2 numbers in the number key of remote controller, then press "COPY" key.

3. When you see ID light in lamp of remote, then the lamp will flash 1 time.

4. Turn off the lamp to which within 15 seconds, then flash setting.

**Control the lamps:**

The function of the keys on the picture on the right.

**Control the single group:** press the ID number of the lamp you want to control and then press the function key (power, color temp, brightness).

**All control Mode press:** "ALL" key to control all groups.

**TABLE:** ON/OFF.

Press the ID number of the lamp you want to set, press "COPY" key.

**OFF:** Press the number key 1-10, press "OFF" (or "ON" key) or "ALL" key.

**Bring OFF on:** Press flash setting, then press "ALL" key.

**Cancel:** Press "OFF" key, then "ON" key or "ALL" key or "COPY" key to bring OFF key to cancel setting mode.

**COPY THE ID OF CONTROLLER:**

Press "COPY" key of one controller and "ID" key of another controller or the same lamp, and 6 seconds, the indicator will flash 3 times, then flash setting.

**Memory:** Press the "COPY" key and "ID" key of the controller which the ID has been copied for 6 seconds, the indicator will flash 3 times.

**NIGHT LIGHT MODE:**

Press "COPY" key when the lamp is turned off by the controller to enter the night light mode.

**CIRCLE MODE:**

Press the ID of the lamp, then press "ON/OFF" key, left, right, up, down to enter the circle mode.

**SCENE MODE:** The button can set by scenes, "A" and "B".

**Save:**

1. Select the light you prefer.

2. Press the ID number of the lamp.

3. Press "COPY" key and then press "A" or "B", the lamp will flash 1 time, then the scene will be saved.

**Recall:**

1. Press the ID number of the lamp.

2. Press "COPY" key or "A" or "B", the lamp will enter the scene you preset.

