 
 


## Synergy 21 LED light panel Angel Wings V2 Ersatz Fernbedienung

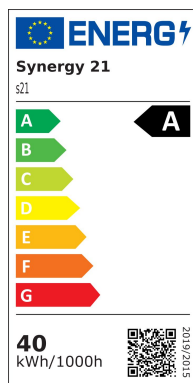

kwh/1000h:	40,00
Lumens:	3200
Watt:	40,0
Nominal Service Life:	50000 Std.
Switching Cycles:	50000
Opt. Ambient Temperature.:	25 °C

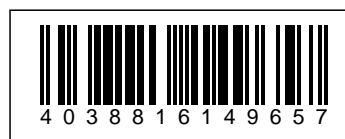

Replacement remote control for Angel Wing V2

How to connect this remote control to the Angel Wing Panel 149407:

1. de-energise the Angel Wing panel.
2. switch the panel on again
3. within 10 seconds, please carry out the following:  
Press the desired zone number (0-99) and the ID button  
Press the desired zone number (0-99) and press the ID button  
(it is very important that you carry out this step twice)  
the panel will now flash once briefly.
4. de-energise the panel again (within the 10 seconds)
5. the login process is complete
6. switch the panel back on and operate it with the remote control

## Additional Images

## DIGITAL LIGHTING CONTROLLERS INSTRUCTION

### Introduction of Multifunction Remote Controller & Simplified Remote Controller:

**Power:** Add battery (2). **Operation Modes:** 01-2-40. **Effective Distance:** 20M (without obstacles)

**Number of controllable lamps:** 1 controller can control 80 groups of lamps, and no limit to the number of lamps in one group.

**ID of Lamp:** ID of lamps could be 1 to 99.

**Multifunction:** ON/OFF, Dimming and Color-temp adjusting setting ON/OFF, 2 scenes recall auto dimming, night light.

**Copy the ID of Remote Controller:** Every remote controller has its ID number. One controller can copy and save the ID number of another controller to control the same lamps, and receive its unique ID number.

### Operating method:

#### Steps of setting ID number of lamps:

1. Turn OFF the lamp to which ID number is to be set, then turn on lamp. Push step ID within 15 seconds.

2. Press 1 or 2 numbers in the number key of remote controller, then press "COPY" key.

3. When you see ID light in lamp of remote, then the lamp will flash 3 times.

4. Turn off the lamp to which within 15 seconds, then flash setting.

#### Control the lamps:

The function of the keys on the picture on the right.

**Control the single group:** press the ID number of the lamp you want to control and then press the function key (power, color temp, brightness).

**All control Mode press:** "ALL" key to control all groups.

#### TABLE OF KEYS:

Press the ID number of the lamp you want to set, press "COPY" key.

**OFF:** Press the number key 1-99, press "OFF" setting OFF key or "OFF" key.

**Color Temp:** Press "Color Temp" key or "Color Temp" key.

**Scene:** Press "1" key, then "2" key or "3" key or "4" key or "5" key or "6" key or "7" key or "8" key or "9" key or "0" key.

**Scene A:** Press "Scene A" key or "Scene A" key.

**Scene B:** Press "Scene B" key or "Scene B" key.

**Scene C:** Press "Scene C" key or "Scene C" key.

**Scene D:** Press "Scene D" key or "Scene D" key.

**Scene E:** Press "Scene E" key or "Scene E" key.

**Scene F:** Press "Scene F" key or "Scene F" key.

**Scene G:** Press "Scene G" key or "Scene G" key.

**Scene H:** Press "Scene H" key or "Scene H" key.

**Scene I:** Press "Scene I" key or "Scene I" key.

**Scene J:** Press "Scene J" key or "Scene J" key.

**Scene K:** Press "Scene K" key or "Scene K" key.

**Scene L:** Press "Scene L" key or "Scene L" key.

**Scene M:** Press "Scene M" key or "Scene M" key.

**Scene N:** Press "Scene N" key or "Scene N" key.

**Scene O:** Press "Scene O" key or "Scene O" key.

**Scene P:** Press "Scene P" key or "Scene P" key.

**Scene Q:** Press "Scene Q" key or "Scene Q" key.

**Scene R:** Press "Scene R" key or "Scene R" key.

**Scene S:** Press "Scene S" key or "Scene S" key.

**Scene T:** Press "Scene T" key or "Scene T" key.

**Scene U:** Press "Scene U" key or "Scene U" key.

**Scene V:** Press "Scene V" key or "Scene V" key.

**Scene W:** Press "Scene W" key or "Scene W" key.

**Scene X:** Press "Scene X" key or "Scene X" key.

**Scene Y:** Press "Scene Y" key or "Scene Y" key.

**Scene Z:** Press "Scene Z" key or "Scene Z" key.

