# **RF RGB Wall Mounted Controller**

09.2836R.04224

Rotate the knob clockwise:

100%(brightness mode).

1. Increase light intensity from 1% to


2. Change RGB color(RGB color mode)

Important: Read All Instructions Prior to Installation


## **Function introduction**

Rotate the knob counterclockwise:

- 1. Decrease light intensity from 100% to
- 1%(brightness mode).
- 2. Change RGB color(RGB color mode)

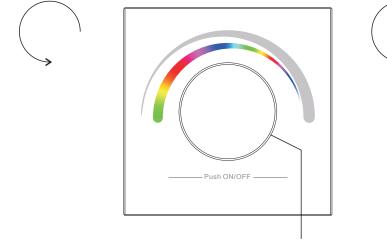

Click the knob to switch ON/OFF.Press and hold down to adjust brightness to 100%. Double click the knob to switch between RGB color mode and brightness mode.

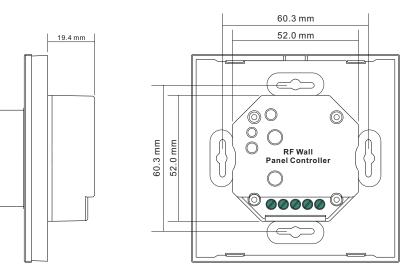

# **Product Data**

Output Signal	RF signal
Power Supply	3V(CR2032)
Power consumption	10 mA
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	86x86x41.6mm

- Rotation sensitive
- · Glass interface(white & black)
- · Compatible with all universal series RF receivers
- Control RGB color
- Control 1 zone of RF receiver
- Waterproof grade: IP20

#### Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture

# Operation

## Pair with RF receivers:

Click "Learning Key"  $\rightarrow$  Rotate or of the knob  $\begin{array}{l} \mbox{Rotate or click} \rightarrow \mbox{LED lights connected with the} \\ \mbox{the knob} \rightarrow \mbox{RF receiver will flicker once} \end{array} \\ \begin{array}{l} \mbox{The receiver is paired with} \\ \mbox{the remote successfully.} \end{array} \\ \end{array}$ 

## How to delete the pairing:

Press and hold down "Learning Key" on the receiver for over 3 seconds until connected LED lights flicker twice, which means the pairing is deleted successfully.

## Installation

Battary Protective film Before the first use, please remove it

Back side