






Quick guide

ALLNET High Performance Displays



Item no.: 228099

Contents

Differences in display sizes:	Fehler! Textmarke nicht definiert.
Package contents	3
General information	4
Target group of the operating instructions	4
Conventions and symbols	4
Warnings	5
Guidelines and standards	6
Disposal of the packaging	7
Disposal of the device	7
General security	8
 GEFAHR Safety instructions for handling the plug-in power supply unit	8
 WARNUNG Safety instructions for setting up the appliance	9
 VORSICHT Safety instructions for operating the device	9
 ACHTUNG Safety instructions for repair and maintenance	10
 HINWEIS Intended use	11
Operating conditions	11
Technical details	12
Dimensions	Fehler! Textmarke nicht definiert.
Tablet 14 inch without/with LTE Same housing	Fehler! Textmarke nicht definiert.
Service	14
Function of the hardware buttons	15
Information on the built-in battery	16
Using the remote control	17
Display sizes Change DPI	17
Automatic start of an application	17
Fixing an APP	20
Ethernet setup	23
W-LAN setup	25
Settings Change language	26
Settings Change time zone, date and time	28
Display lock settings	31
Change volume setting	31
Display settings	32
Hide navigation bar/status bar	33

Settings "Switch display off automatically"	34
Connection to the Google Play Store	34
Exit app.....	36
Split screen function:	37
Create screenshot	37
Update firmware:	39
CE	40

 
Package contents

Please check the contents of the packaging before proceeding with the commissioning of the display.

- ALLNET High Performance Showcase Display
- 12V power supply unit
- Printed quick guide

Packing List

After opening the packaging, please confirm the packaging content below.

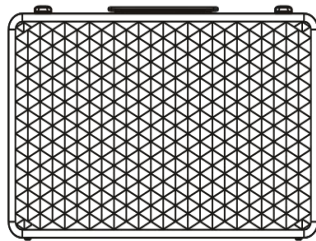

Monitor x1



Power Cable x1



Type-C Cable x1



User Guide x1



Bluetooth Remote Control x1

General information

The ALLNET High Performance Display with RK3588 is a 4K display with WiFi 6 and USB-C support and Power over Ethernet (PoE) capability. This display is designed for high-quality video and audio performance, with a resolution of up to 3840x2160 pixels and support for High Dynamic Range (HDR) content. WiFi 6 and USB-C connectivity options allow for easy connectivity with a wide range of devices, and PoE capability allows the display to be supplied with both power and data via a single Ethernet cable, simplifying installation and reducing clutter. This display is suitable for a variety of applications including home entertainment, conference rooms and digital signage.

Target group of the operating instructions

The operating instructions are intended for any person using the device.

- set up,
- served,
- cleans or
- disposed of.

Conventions and symbols

The following text formats are used in these instructions. These serve to increase the clarity of the instructions.

Chapter heading

Subheading

Simple text

Important information in plain text

Designates buttons, components, functions

Warnings

The warnings in these operating instructions are structured according to the following scheme:



The signal word "**DANGER**" indicates a warning of immediate danger to life!



The signal word "**WARNING**" indicates a warning of possible danger to life and/or serious irreversible injuries!



The signal word "**CAUTION**" indicates a warning of possible moderate or minor injuries!



The signal word "**CAUTION**" indicates possible material damage.



"**Note**" indicates useful or important information about the product.

Guidelines and standards



This device complies with the following directives:

- EMC Directive 2014/30/EU
- Radio Equipment Directive 2014/53/EU
- Eco-Design Directive 2009/125/EC
- RoHS Directive 2011/65/EU.

Hereby, ALLNET Computersysteme GmbH declares that the ALLNET PoE Displays are in compliance with the essential requirements and other relevant provisions of the following directives and Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following link
Internet address available: <http://ce.allnet.de> and at the end of the instructions.



- EMC Directive 2014/30/EU
- Radio Equipment Directive 2014/53/EU
- Eco-Design Directive 2009/125/EC
- RoHS Directive 2011/65/EU.

ALLNET Computersysteme GmbH hereby declares that the ALLNET PoE Displays is in compliance with the essential requirements and other relevant provisions of the following Directives and Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following
Internet address: <http://ce.allnet.de> and at the end of the instructions.

EU contact details:

ALLNET GmbH Computersysteme Maistrasse 2

82110 Germering

Phone +49 (0)89 894 222 - 22

Fax +49 (0)89 894 222 - 33

Email: info@allnet.de

Disposal of the packaging

DANGER

Risk of suffocation from foil and other packaging materials. Do not leave the packaging and its parts to children. Dispose of the packaging in an environmentally friendly manner. Ask the dealer or the municipal waste disposal facility about options for disposing of the packaging in an environmentally friendly and appropriate manner.

Disposal of the device



Old appliances are not worthless waste. Valuable raw materials can be recovered through environmentally friendly disposal. This appliance is labeled in accordance with Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). At the end of its service life, this product must not be disposed of with normal household waste, but must be handed in at a collection point for the recycling of electrical and electronic equipment. This is indicated by the symbol on the product, the instructions for use or the packaging. The materials are recyclable according to their labeling. The reuse, recycling or other forms of recovery of old appliances make an important contribution to protecting the environment. Ask your dealer or local waste disposal facility about the options for disposing of the appliance in an environmentally friendly and appropriate manner.



As a consumer, you are obliged to take all batteries and rechargeable batteries, regardless of whether they contain harmful substances or not, to a collection point in your municipality/district or to a retailer so that they can be disposed of in an environmentally friendly manner.

NOTICE

Permanently installed appliance batteries or rechargeable batteries may remain in the appliance when disposed of via the collection point.

General security



The product is intended solely for the purpose for which it was designed. Only use the product as described in the operating instructions. Any other use is considered improper and may result in material damage.

The manufacturer or dealer accepts no liability for damage caused by improper or incorrect use. All safety instructions must be read carefully and these operating instructions must be kept for future reference. All warnings and instructions in these operating instructions must be followed.




Keep the operating instructions and pass them on to any subsequent owner.



Safety instructions for handling the plug-in power supply

unit

The plug-in power supply unit may only be connected to a **mains voltage of 100-240 V~, 50/60 Hz.** Never operate the plug-in power supply with any other voltage.

-  **RISK** Only use power supply units that are approved for this device.
- Only connect the plug-in power supply unit after the installation has been completed correctly.
-  **RISK** Only connect the appliance to a properly installed and earthed mains socket. The mains voltage must match the specifications on the appliance's rating plate.
- The socket outlet should be as close as possible to the appliance.
- Avoid the use of multiple sockets. Ensure that the mains cable or plug is always easily accessible so that the appliance can be quickly disconnected from the power supply.
- Lay the mains cable so that no one can trip over it.
- Plug the mains adapter fully into the socket.
-  **WARNING** Do not touch the plug-in power supply unit with wet hands, risk of electric shock.
- If the plug-in power supply unit is defective or if the appliance is damaged in any other way, it must not be put into operation.
- Do not pull the plug-in power supply unit out of the socket by the cable.
- The appliance remains connected to the mains even when it is switched off. Unplug

the mains adapter from the socket if the appliance is not to be used for a longer period of time.

- In the event of malfunctions or smoke and odors from the housing, immediately unplug the power supply unit from the socket.

WARNING

Safety instructions for setting up the appliance

- DO NOT place the appliance near radiators, air conditioners or water sources. Otherwise there is a risk of electric shock, short circuits or fire, as water may come into contact with the appliance.
- Make sure that the humidity is between 20 % and 80 % and that no condensation forms.
- Ensure that the device is NOT exposed to direct sunlight, extreme heat, naked flames or dust. Otherwise there is a risk of electric shock, short circuit or fire.
- The device is designed for use in closed rooms.
- The openings on the back of the appliance are used for ventilation to prevent the appliance from overheating. These must always be kept clear.
- To avoid damage, always place the product securely.

ATTENTION

Safety instructions for operating the appliance

- Read these operating instructions carefully before using the appliance!
- The device can only be operated with the voltage described on the back and on the power supply unit.
- Only replace any existing batteries with the same or an equivalent battery type
- Do not use any appliances that are obviously faulty. If the appliance does not work normally - especially if unusual noises or odors occur - unplug the power plug from the socket immediately.
- If the cables are damaged, the appliance must no longer be used.
- Do not place the appliance on an unstable surface. The appliance could be damaged or people could be injured. Any fixings should only be fitted in accordance with the manufacturer's instructions or obtained from the manufacturer.
- Do not expose the device and the remote control to direct sunlight. This impairs the function and could lead to damage
- Do not use the appliance in a damp environment or near gas flames, hotplates or other hot objects.
- Keep the appliance dry.
- Protect the device from the effects of weather such as wind, rain, humidity and moisture.

- Do not permanently display a still image. This could damage the display.
- Do not open the housing, but contact your specialist dealer or the manufacturer for repairs.
- Work may only be carried out on the appliance if it has been disconnected from the power source.
- Ensure that the appliance is only operated by persons who have read the instructions or have been instructed in its operation by a competent person.

**RISK**

Safety instructions for repair and maintenance

- Repairs and maintenance work may only be carried out by customer service or by specialist personnel authorized by the manufacturer. Incorrect repairs can result in considerable danger to the user.
- Regular maintenance by the manufacturer is not necessary.
- Never attempt to repair a defective appliance yourself. Always contact one of our customer service centers.
- Do not open the appliance under any circumstances. This may only be carried out by customer service or by specialist personnel authorized by the manufacturer. Otherwise there is a risk of electric shock.
- Operators may only rectify faults themselves if they are obviously due to operating errors.
- Clean the display regularly.
- Disconnect the mains plug from the socket before cleaning.
- Do not use liquid cleaners or cleaning sprays. The appliance may only be cleaned with a damp cloth.
- It is prohibited to make modifications to the appliance.
- Damaged devices or damaged accessories may no longer be used.

**NOTICE****Intended use**

The tablet is suitable for both commercial and private use. However, for private use, there are also restrictions in functionality, which arise due to the native Android operating system. This concerns the integration of certain video and audio codecs and the functionality of some apps offered in the Playstore. We cannot accept any liability for this and this is not a defect or warranty case. If you do not have in-depth experience with the Android operating system, please contact our hotline beforehand. The tablet is a wall display with operating system and can be supplied with power via PoE or power supply unit. A battery is not integrated. The operating system is Android (installed), Linux can be installed (n. installed). This device complies with CE regulations.

The manufacturer accepts no liability for damage caused by improper use. Read the operating instructions carefully before commissioning. Only then can all functions be used safely and reliably.

Operating conditions

The appliance is designed for use in enclosed spaces and must be protected from excessive dust, extreme temperatures, moisture and condensation.

The environmental requirements are specified as follows:

Operating conditions:

Temperature 0° - +40°

Humidity 20% - 80% non-condensing

Storage conditions:

Temperature 0° - +60°

Humidity 10% - 90% non-condensing

Technical details

System	CPU	RK3588 Quad core cortex A55+Quad core cortex A76
	RAM	8 GB (see online description)
	Internal memory	128 GB
	Operation system	Android 12
Display	Panel Size	27" LED LCD
	Panel Type	IPS
	Resolution	27" 1920x1080; HDMI 1920x1080
	Display Colors	16.7M Colors
	Color Gamut	sRGB 99%
	Display mode	Normally black
	Viewing angle	85/85/85/85(L/R/U/D)
	Contrast ratio	1000:1
	Luminance	250cdm2
	Aspect Ratio	16:9
	Response time	14ms
	Back-light Type	Eled
Touch	Model Type	Incell Touch
	Number of points	10-Point
	Interface for touch	HID-USB
Network	WiFi	802.11b/g/n/a/ac/ax 2.4/5GHz (WiFi 6)
	Ethernet	100M/1000M
	Bluetooth	Bluetooth 5.2
Interface	Power Jack	DC power input
	MIC IN	External microphone input
	Earphone Output	3.5mm earphone output
	Type-c	Full Function (Except for charging function)
	SIM slot	no
	USB	Standard USB 2.0 host
	USB	USB 3.0
	USB	USB 3.0
	HDMI IN	Support HDMI 2.0 (Touch Support USB)
	RJ45	Ethernet interface
Other	Product Colors	white/black
	VESA	100mm*100mm
	Button	Power/Vol+/Vol-
Other Power	Speaker	4Ω*10W*4
	Microphone	Built in 4x Microphone , Support noise reduction and echo cancellation
	NFC	no
	G-sensor	Support 90 degrees
	Camera	no
	Language	Multi-language
	Certificates	CE/FCC
	Power Type	Adapter
	Input Voltage	DC 12V/4A
	Power consumption	≤25W
Working Surrounding Accessories	Storage Temperature	-20°C---60°C
	Working Temperature	0°C---50°C 10~90%RH
	Adapter	Adapter, 12V/4A
Working Surrounding	User manual	yes

 
Plug-in power supply	
Manufacturer	Shenzhen Fujia Appliance Co, Ltd. Address: 5F of Building F, Hengchangrong (xinghui) Sci-Tech. Park, Huaning Road, Longhua District, Shenzhen, Guangdong, P.R. China
Type	FJ-SW20261203000
Input voltage	100-240Vac
Input frequency	50/60Hz
Input current strength	1.5A
Output voltage	12V
Output current	3A
Output power	36W
Average efficiency in operation	87,40%
Efficiency at low load (10 %)	75,59%
Power consumption at no load	0.1W Max
Energy efficiency class	VI

Operation


Connect the tablet to the power supply. The tablet starts automatically. The device has a switch on the case lid which switches the device off as soon as the case is closed.

Product Usage Instructions


1, Place the product on a flat surface with the front side facing up.

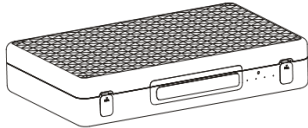

 
2, Turn on the battery switch located on the left side of the product. (After turning off the battery switch, the product can only be used by connecting the power cable)

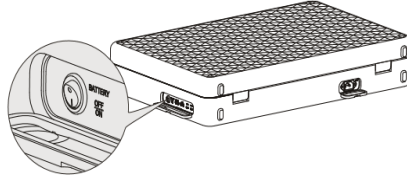

 
3, If power supply is needed, you can use the power cable to connect. The power port is located on the back of the product.

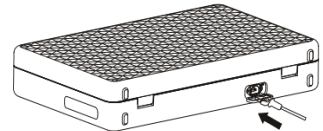

 
4, Unlock the front lock latch of the product and open the top cover.



 
5, Please lift the display screen upwards, with the display facing forward.

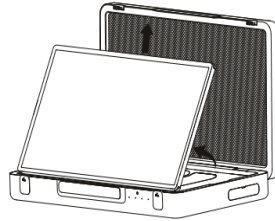

 
6, To rotate the screen, please pull the screen upwards and rotate clockwise (anti-clockwise rotation is not supported).

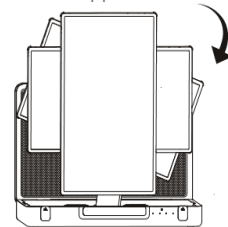

 7, Box internal storage box, storage power cord, remote control and other accessories.

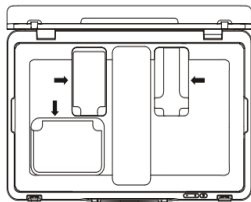

 
8, Power on by short-pressing the power button. For the first boot, please follow the on-screen setup wizard.

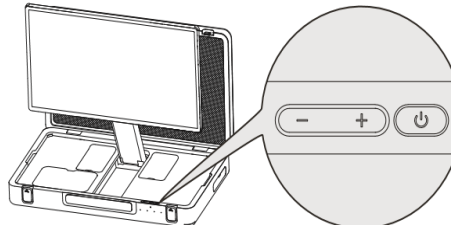





Function of the hardware buttons

 Button Instructions

Please use the included standard AC power cable.




Button	Functions
	When pressing the " " direction: The entire device is in the power-off state. When pressing the " ○ " direction: The entire device is in the power-on state.
	When in the power-off state: Press and hold for 2-3 seconds to power on. When in the power-on state: 1. Press and hold for 2-3 seconds to enter shutdown confirmation [Power off/Restart]. 2. Short press to enter the sleep screen state, and short press again to exit the sleep state.
	Adjustment system volume increase
	Adjustment system volume reduction

※ When the power cable plug supplies power to the box, try to move the product in a small range to avoid the danger of power leakage caused by vigorously ripping off or tearing the power cord.

Port Connection Instructions

 Rich interfaces to support a variety of peripheral connections.

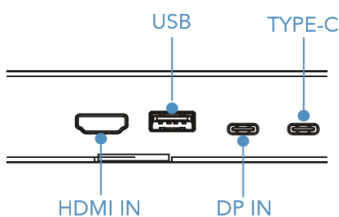

HDMI IN : For connecting an external HD video signal input.

U S B : Can be used with a USB storage device, or for a mouse and keyboard receiver.


DP IN : Multi-function interface 1. Supports PD fast charging protocol, adaptive four-stage voltage 5V/9V/12V/15V output, maximum 45W.

2. Supports DP screen mirroring, you can output your cell phone/Nintendo Switch game console to the device via TYPE-C cable.

T y p e - C : Connect the TYPE-C docking station to connect a USB flash drive, mouse and more.


Touch Function Instructions

 Adopting IPS full HD ten point capacitive touch LCD display screen. To keep the screen clean, please make sure it is clean.

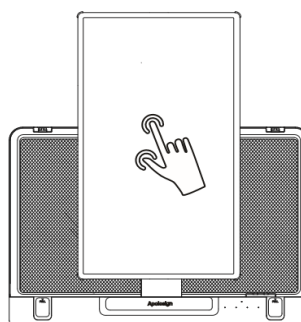

Built-in Battery Instructions

 This product contains a built-in power supply board and a rechargeable battery, allowing it to be used for a period of time without connecting to other power sources. When the battery is depleted, connect the power AC cable to charge the device. Upon connecting the power AC cable, the power indicator light will turn green.

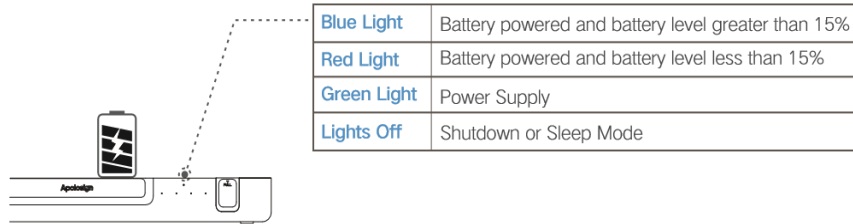

⚠ Notice :




As the product ages, there will be a proportional decline in battery life, which is a normal occurrence.

 
 
To extend battery lifespan, it is recommended to recharge the battery after a certain period of use. After the battery is fully charged, unplug the AC power cable to avoid keeping the battery continuously at a full charge. Avoid charging the battery in extreme conditions. If not in use for an extended period, please turn off the battery switch to preserve battery life.

※ The standard usage time mentioned in the manual is based on our company's laboratory test data, and the actual time may vary due to different usage conditions.

Using the remote control

Remote Control User Manual

1. Click  in the upper-right corner of the main page to enter the Setting.
2. Click on [Connected Devices] to establish a Bluetooth connection.
3. Click on [+Pair with new device].
4. Simultaneously long-press the "  " back button and "  " function button on the remote control. Release the buttons when the indicator light on the remote control is continuously flashing.
5. A new connected device "Remote Controller" will appear below [Available Devices]. Select the "Remote Controller" device for pairing.
6. When prompted to confirm the pairing on the screen, click "Pair" to successfully set up the remote control.

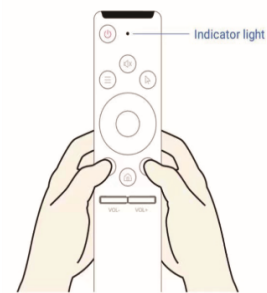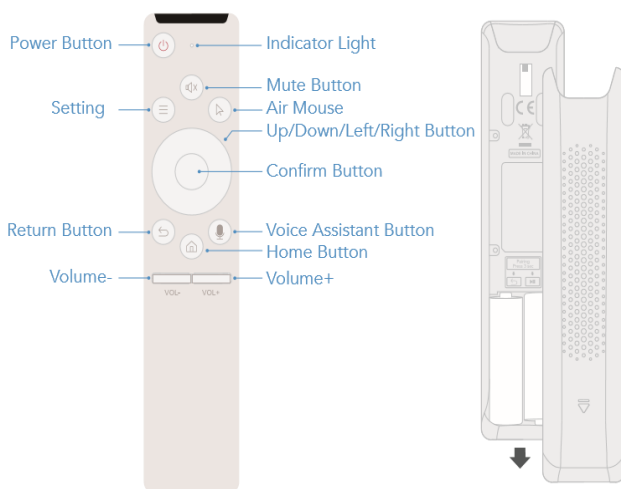

After the device activates Bluetooth pairing, simultaneously press and hold the "  " and the "  ".

 
Note: For safety reasons, the remote control does not come with batteries by default. Please purchase two AA batteries on your own. The remote control is only intended for auxiliary use and may not support all applications. Voice functionality requires internet support.

Display sizes Change DPI


The content of the displays can be resized. This is important if you change to a different resolution with software such as Esy DPI Changer. To do this, please go to the Display/display size settings. You can now adjust the content using the slider.

Automatic start of an application

You can use this function to start an app automatically. To do this, please go to Settings/Apps & notifications. There, click on Show all apps.

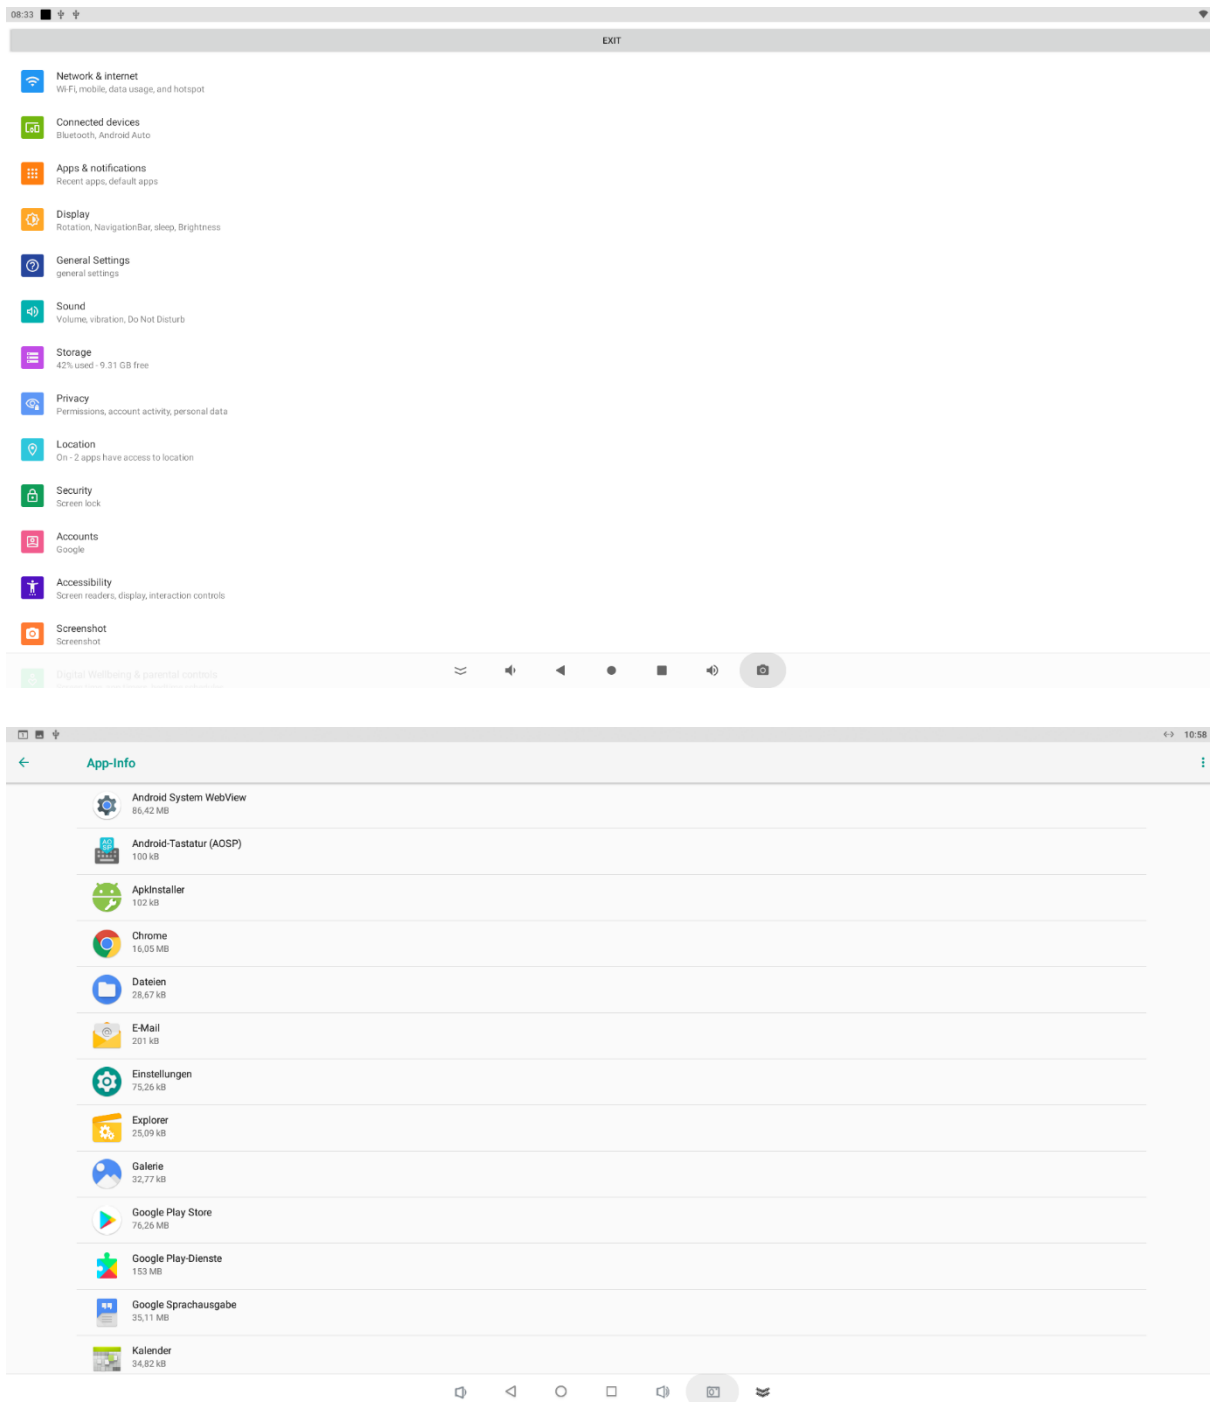

 Now select the desired app and press and hold on it until the following pop-up window appears for confirmation.

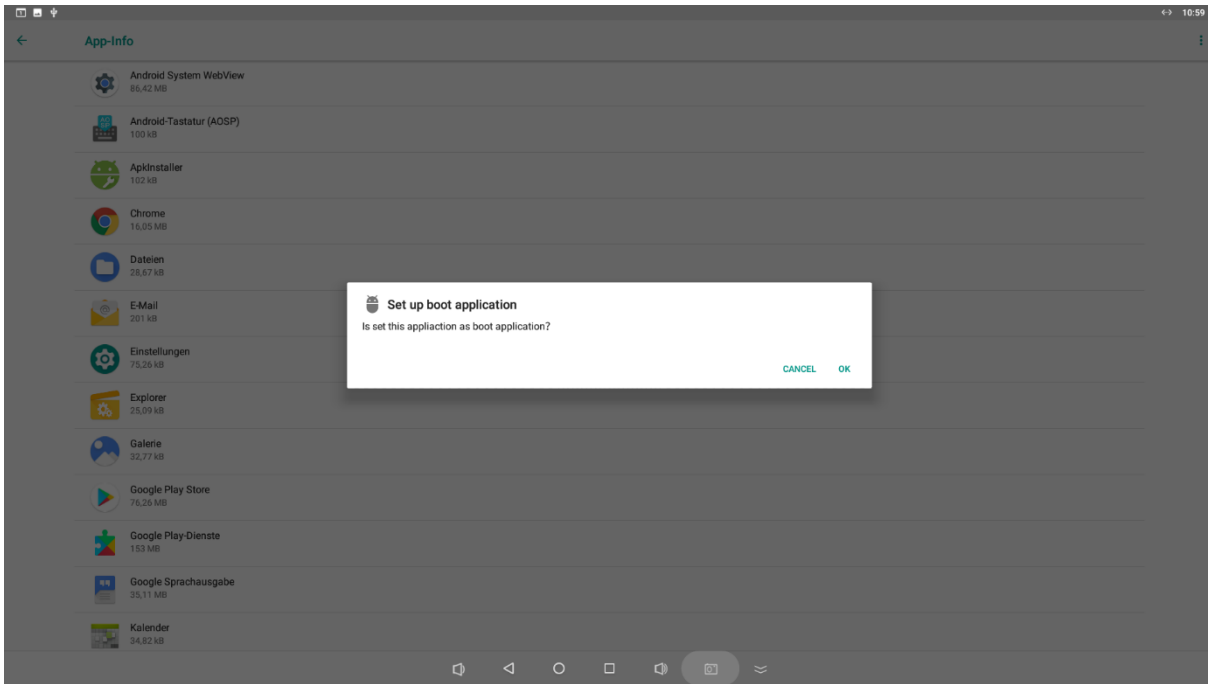

Confirm with Ok. When restarting, the application starts automatically.

 
Fixing an APP

Please note:


This kiosk mode has been natively integrated into Android from version Lollipop. The functionality is simple and is only a simple protection against unauthorized access. The app can still be closed using a key combination. You can find a professional kiosk app in the Playstore under "Ekiosk Browser". Go to Settings/Security and click on "Advanced" Screen lock.




There, please go to the item "Screen fixation/App pinning" and click on it.

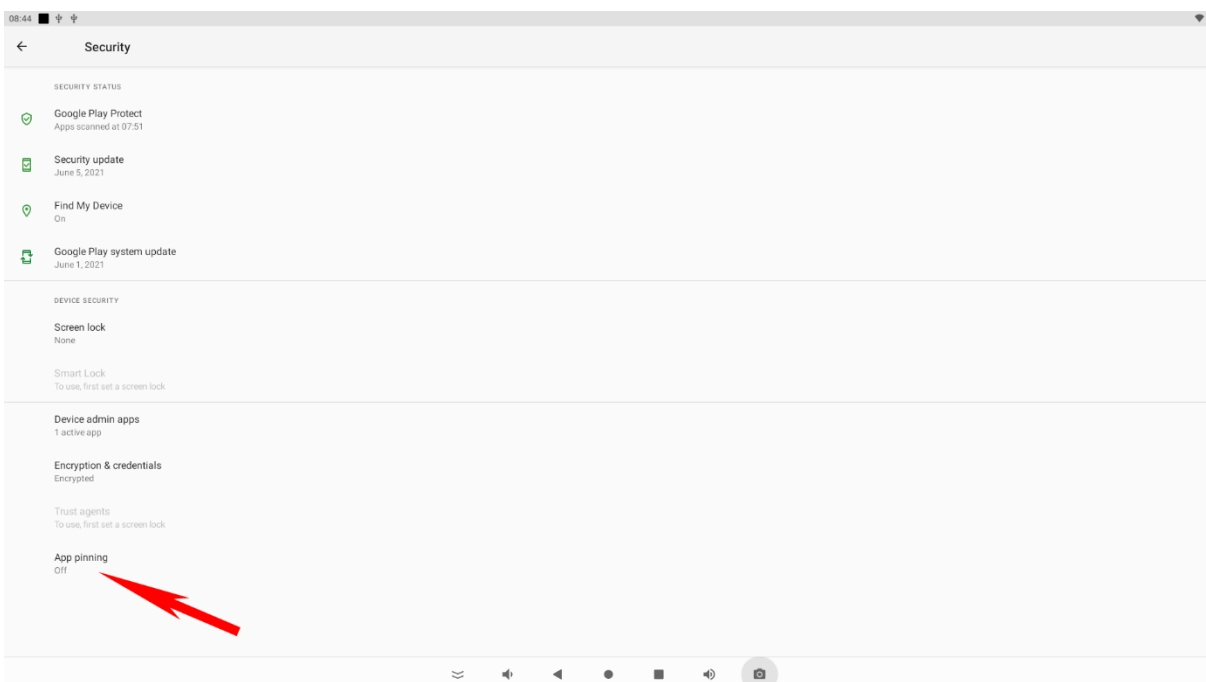


You can now switch on the main switch.

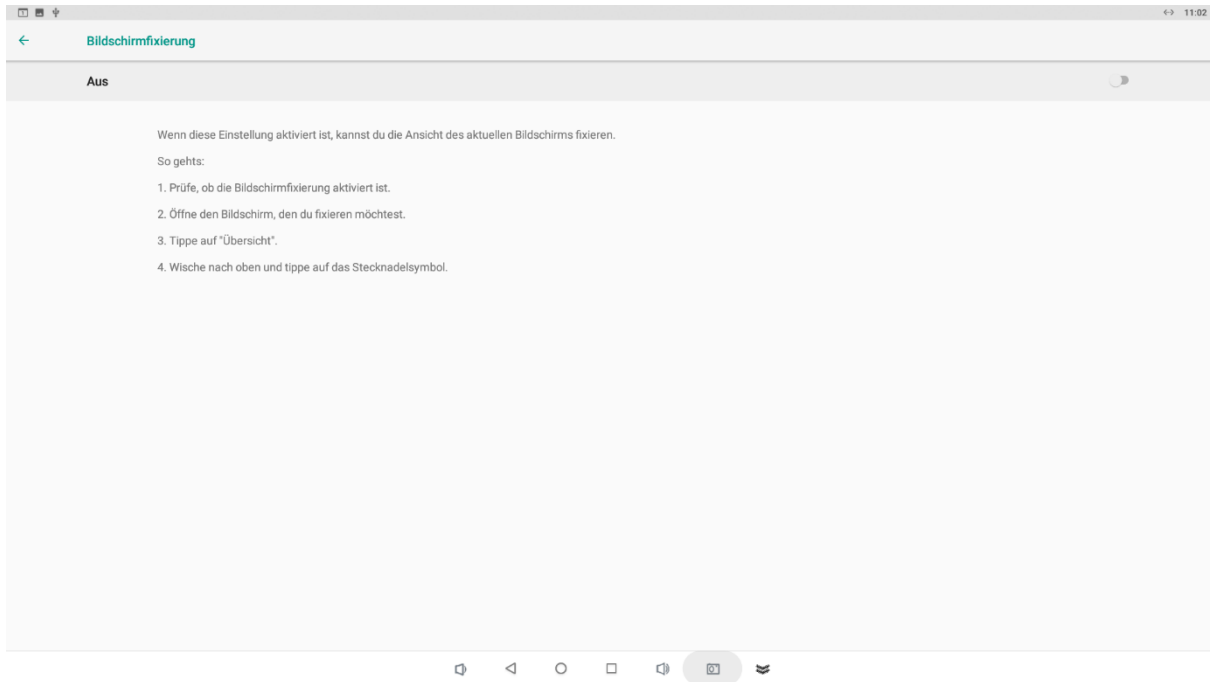 


  As an option, you can also install a security feature that locks the tablet when the app is closed.

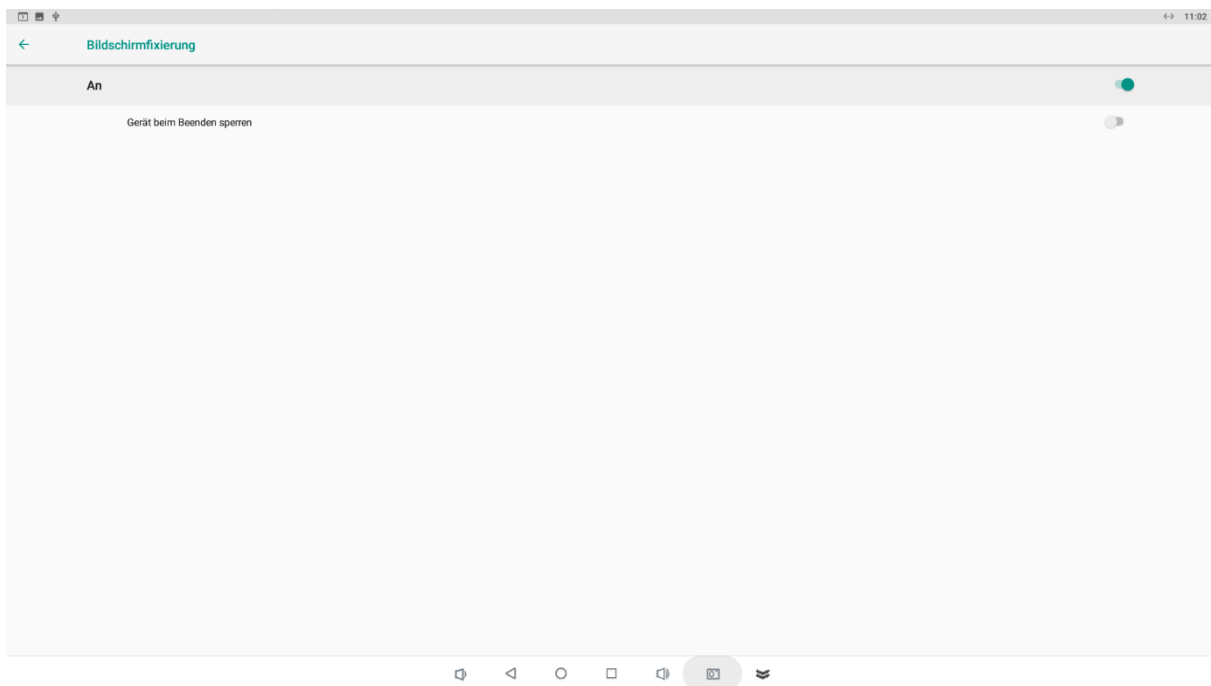

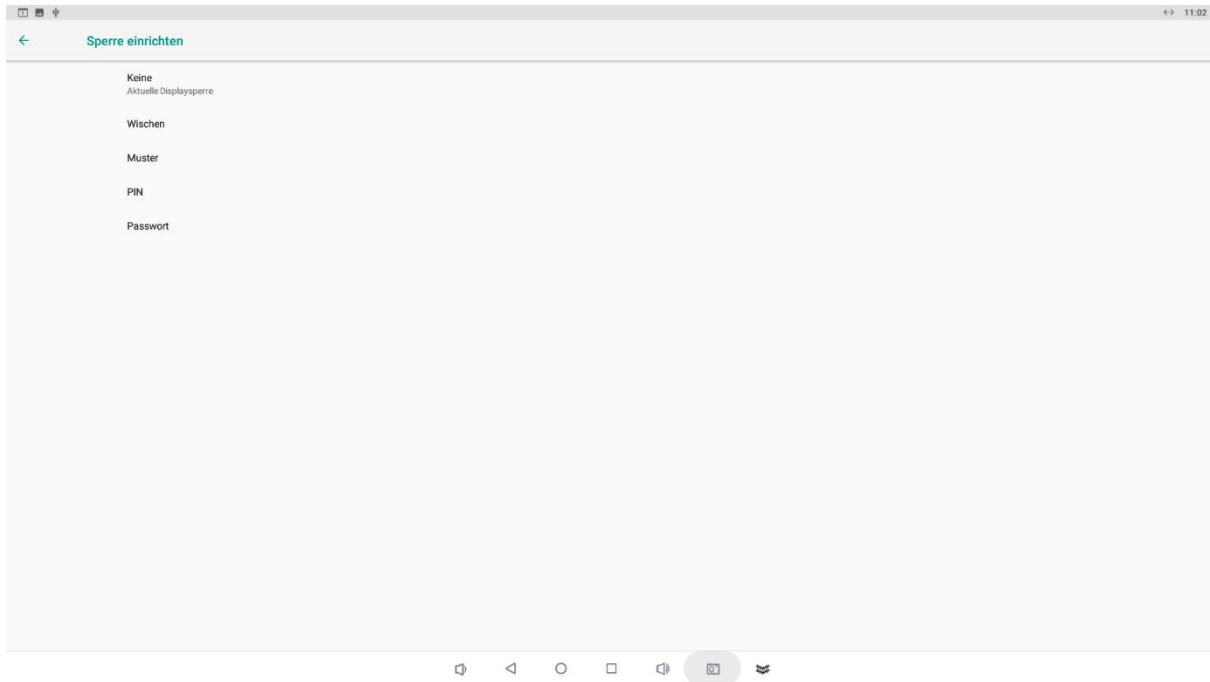

 You will find the most recently opened apps under the square in the navigation bar. Click on the middle icon at the top of the app you want to use.

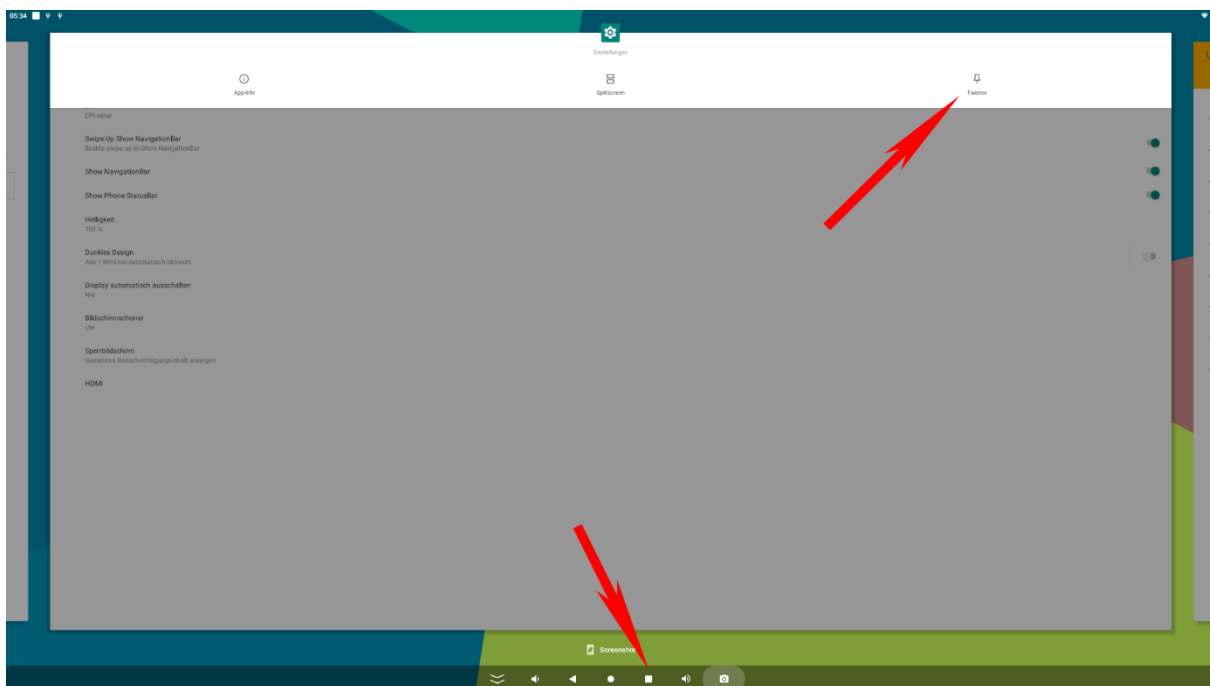


This screen fixation is no longer active after a restart and the fixation procedure must be carried out again.


Ethernet setup

Open the " Settings"

 Select "Network&Internet", then click on "More"

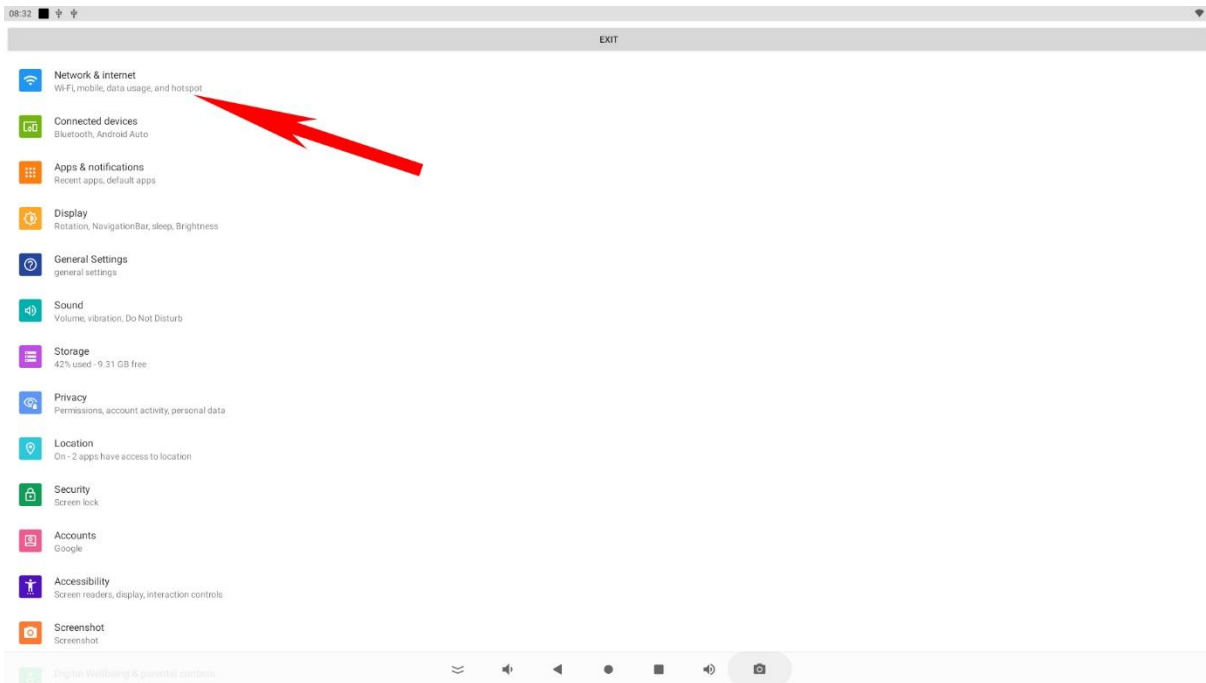

Please click on "Ethernet"

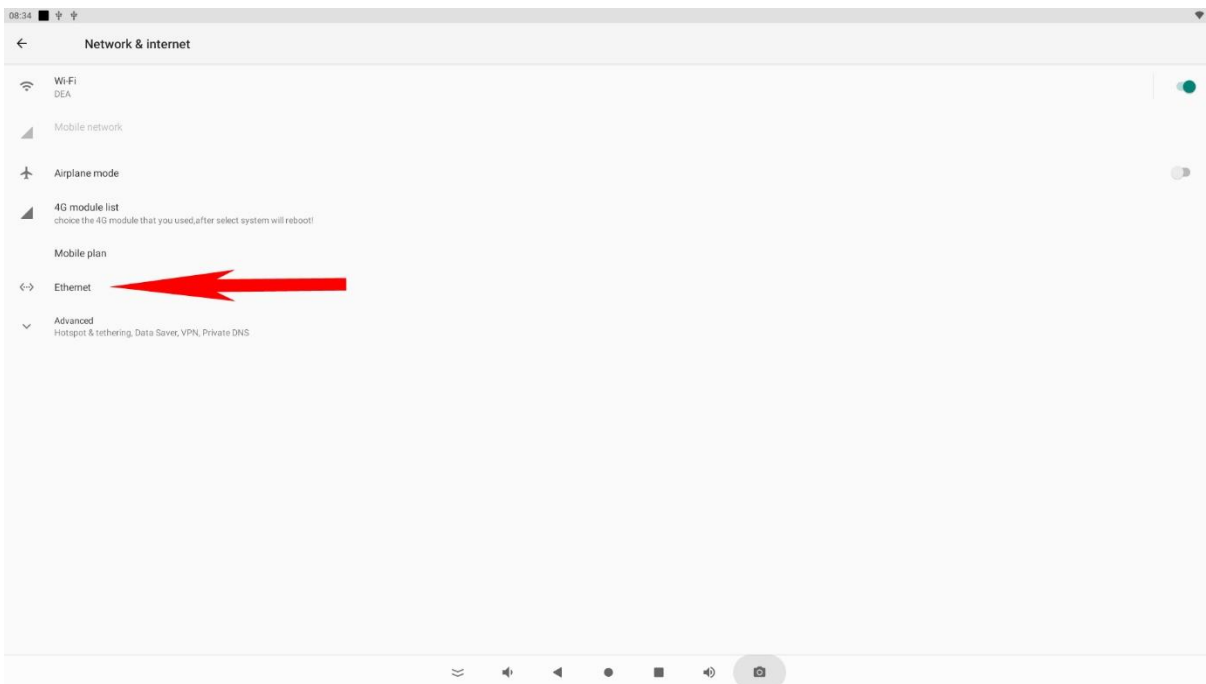 

If the switch is not activated, please press it.



 
Under "Ethernet Ip mode" you can select DHCP or Static Ip.



W-LAN setup


Open the "Settings" app

Select "Wireless & Network", then click on Wi-Fi and activate the switch

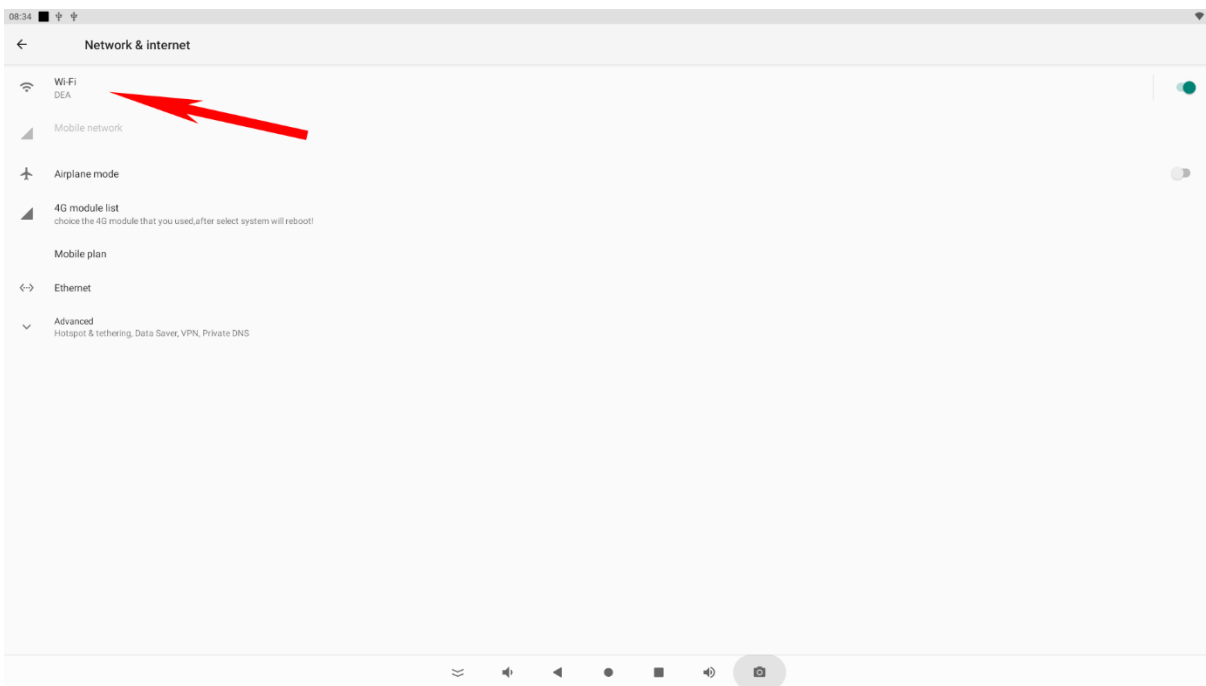


Select the desired WLAN network and enter the password if necessary

 Once the connection has been successfully established, the tablet automatically connects to the network if it is within range.

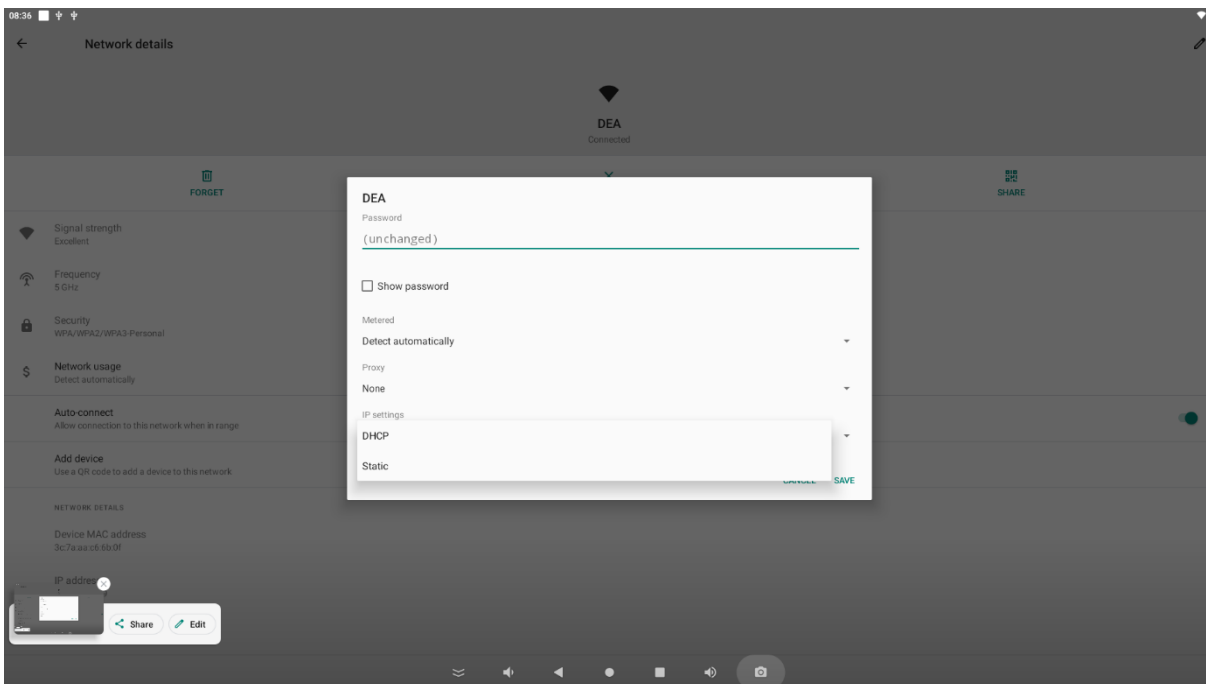

 
You can set up a static network connection under IP Setting. By clicking on "static", you can set up the IP address, gateway and DNS server.


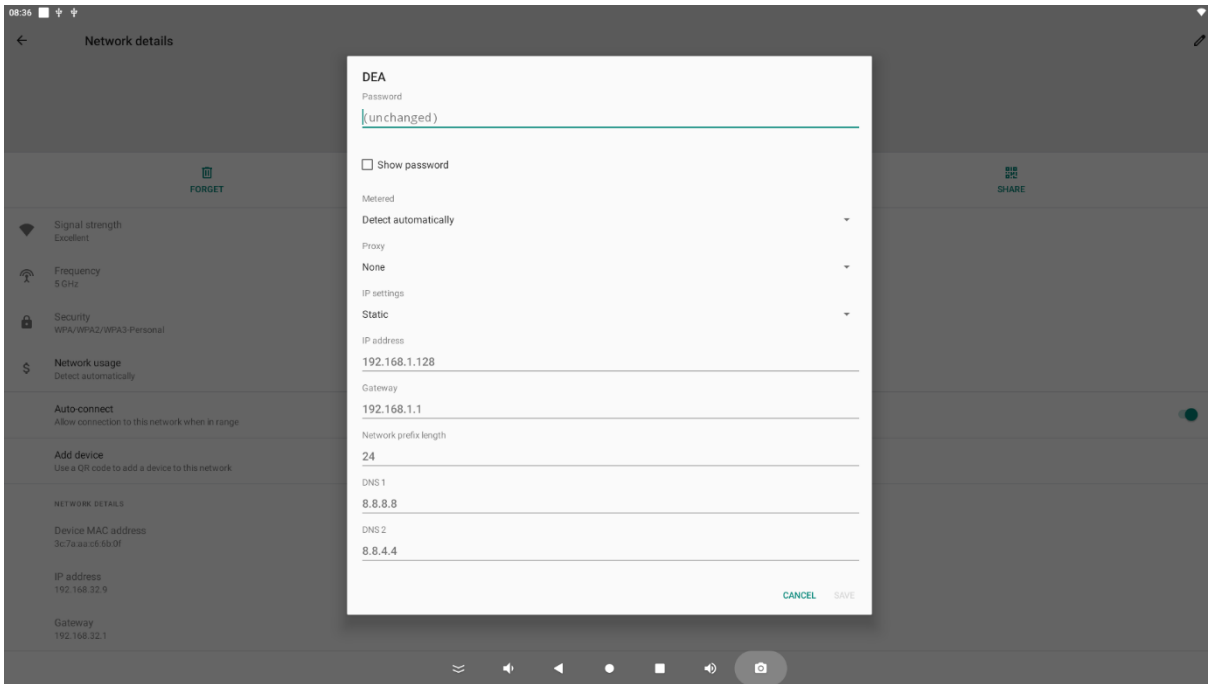


Settings Change language


Open the "Settings" app

   Under "System", select "Language & input", then click on Language and select the desired language

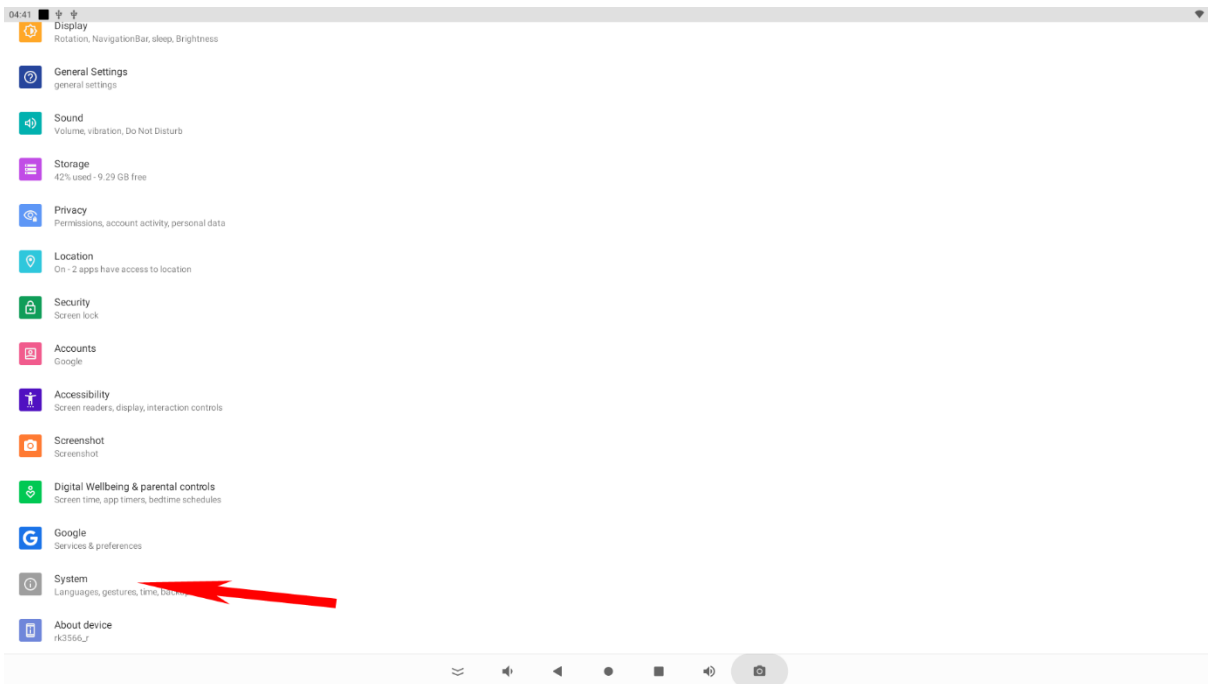

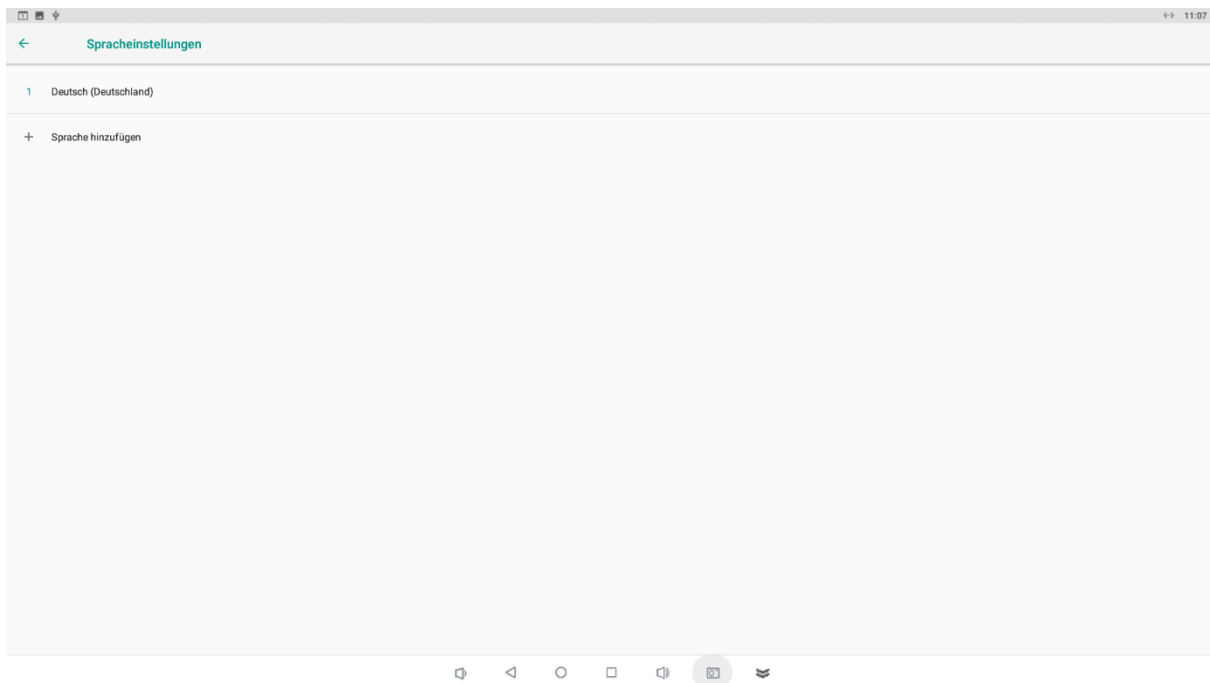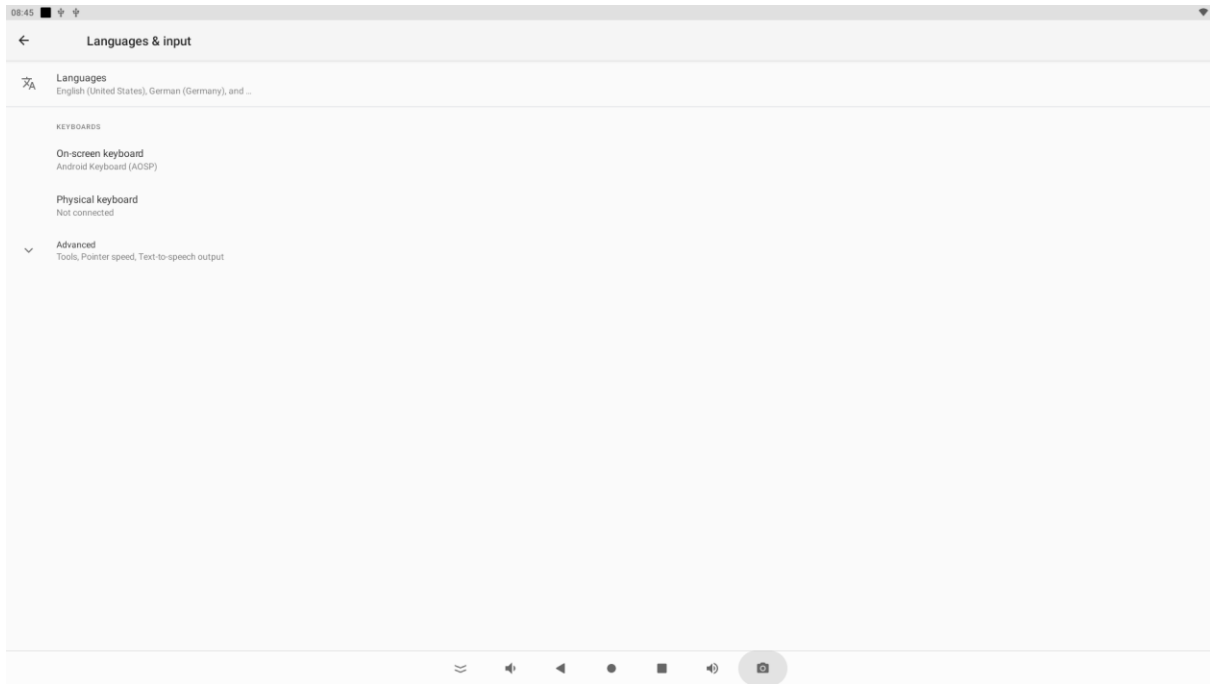

 
Activate the language by dragging the language upwards on the right-hand edge.

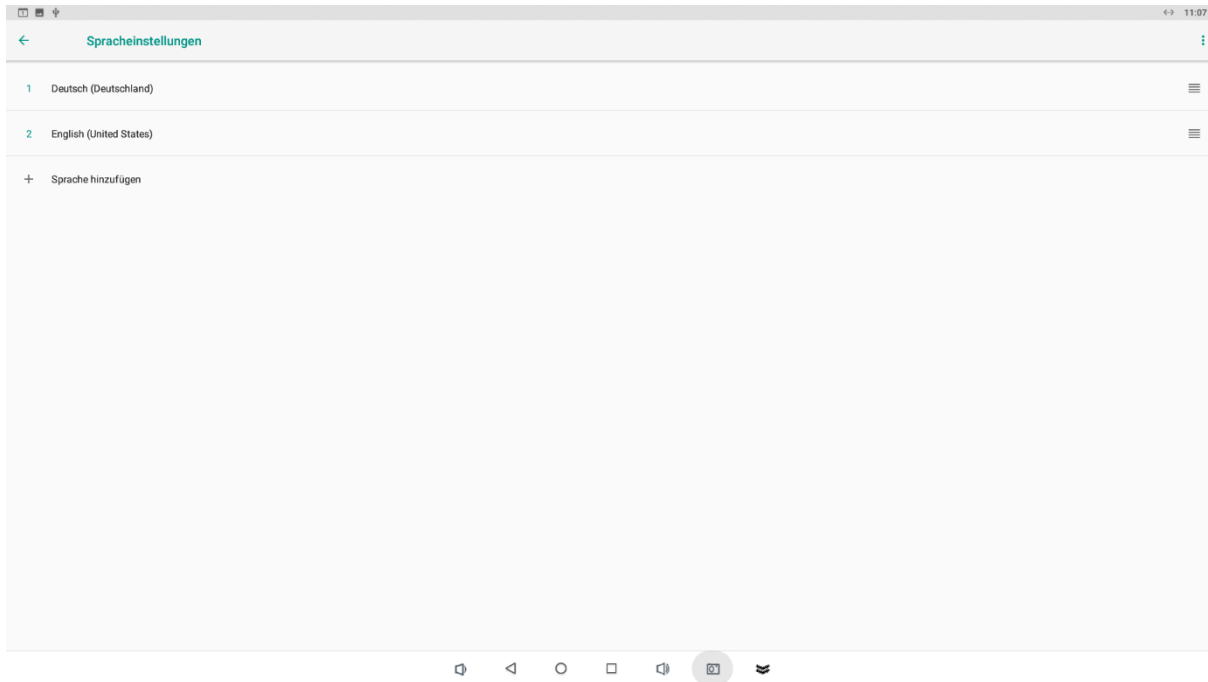



Change time zone, date and time settings

Open the "Settings" app and select "System".

 Select the "Date and time" menu item from the "System" menu item.

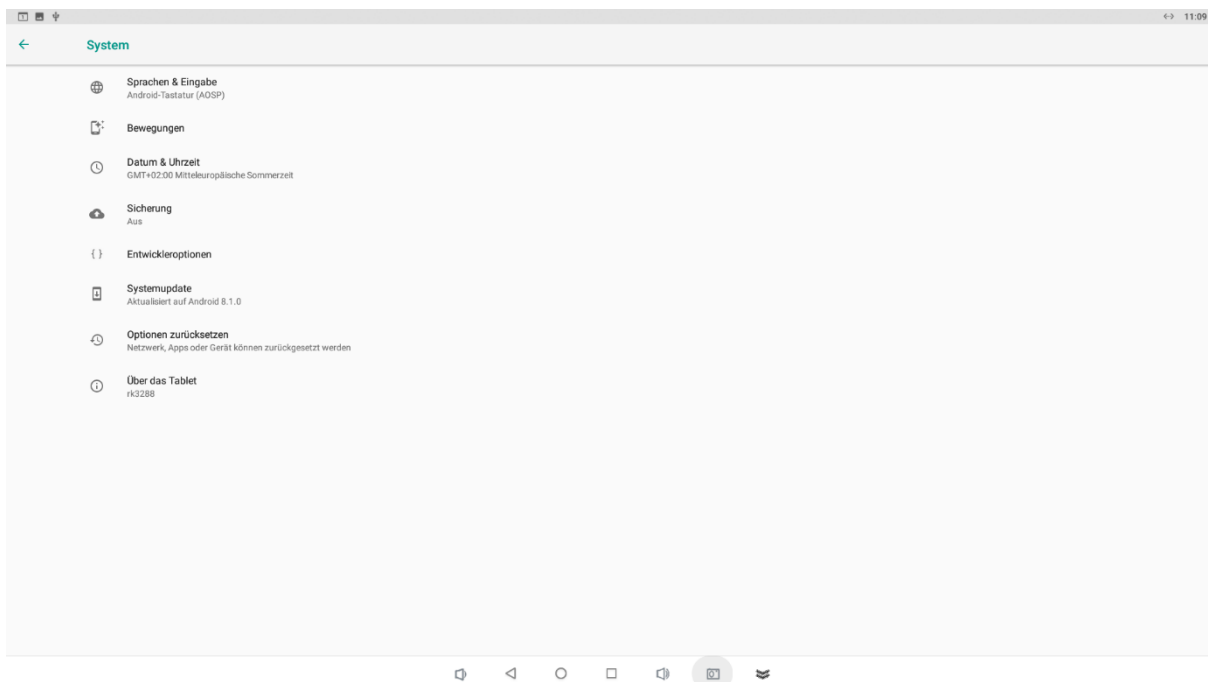

  You can either obtain the appropriate time zone automatically via the network or change it manually via the "Select time zone" item.

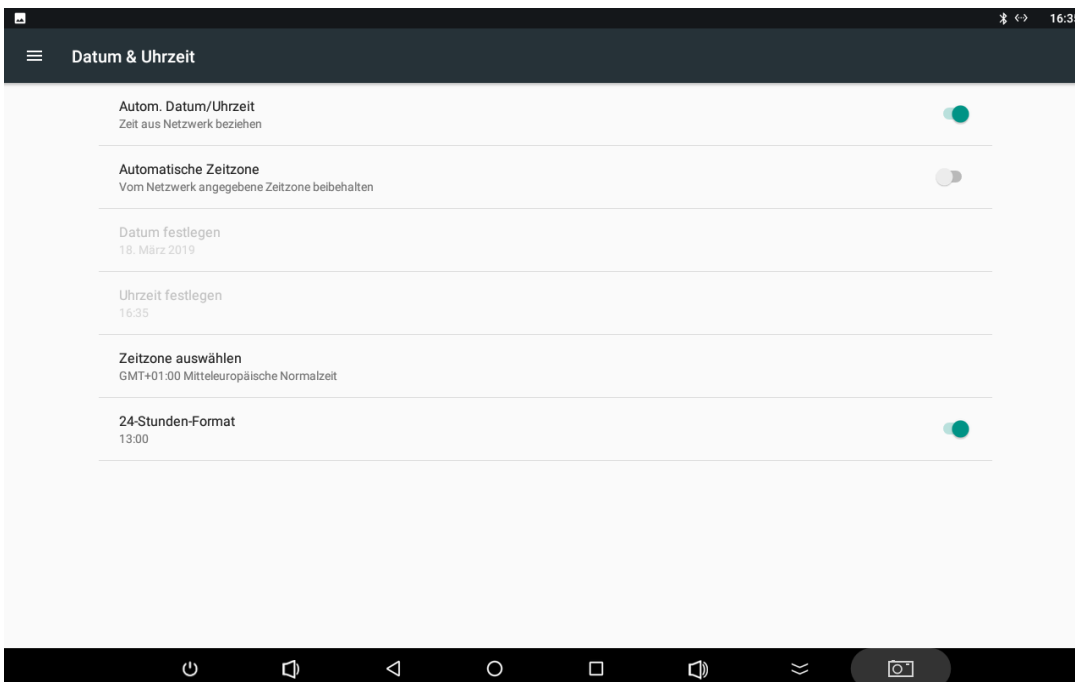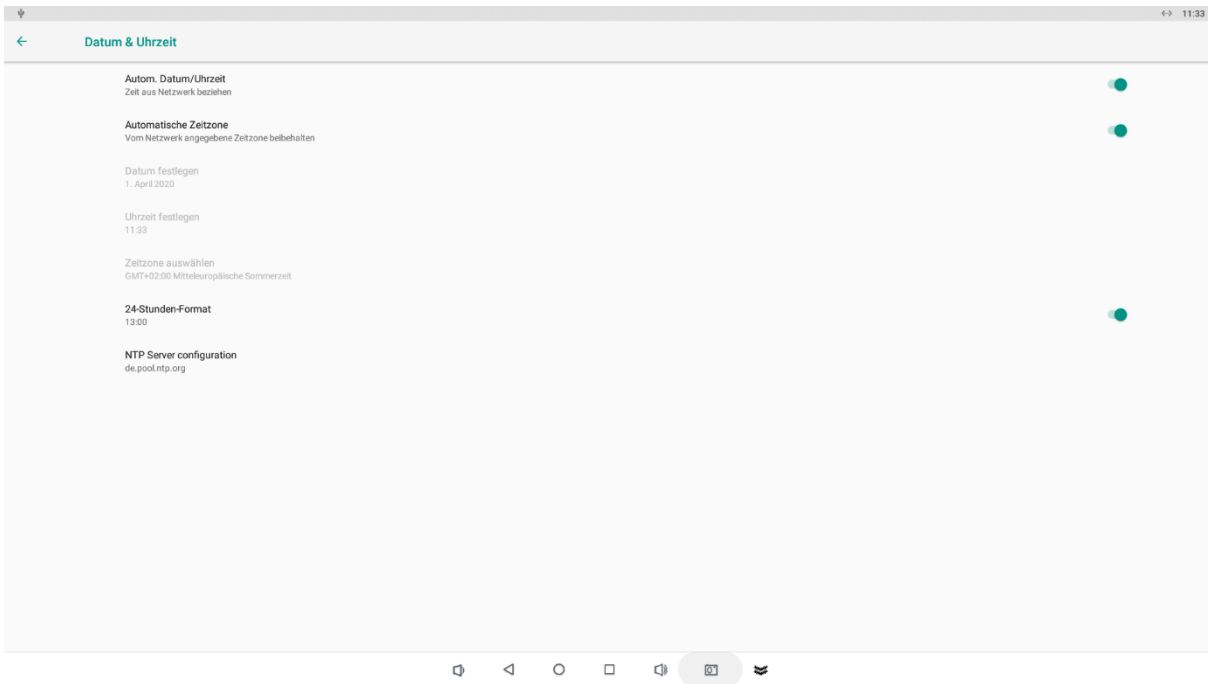




Display lock settings

Open the "Settings" app and then the "Security" item.



 Under "Device security/display lock" you can then assign a PIN to unlock the tablet.

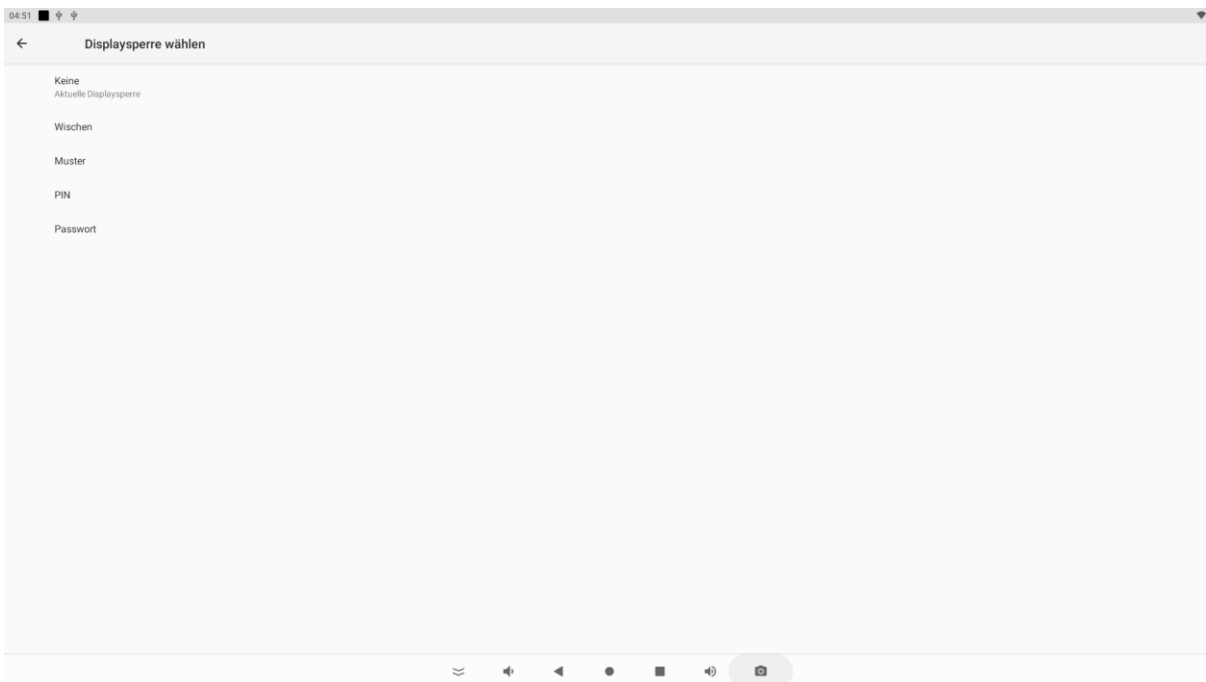

Change volume setting

Open the "Settings" app

 
Select the "Sounds" menu item from the "Device" menu item. Here you can set the volume for media playback, alarm clock and notifications.

 


Display settings

Open the "Settings" app

Select "Display", then click on Brightness level, now you can adjust the brightness continuously. In addition to the brightness, you can also change the background or select a screen saver.

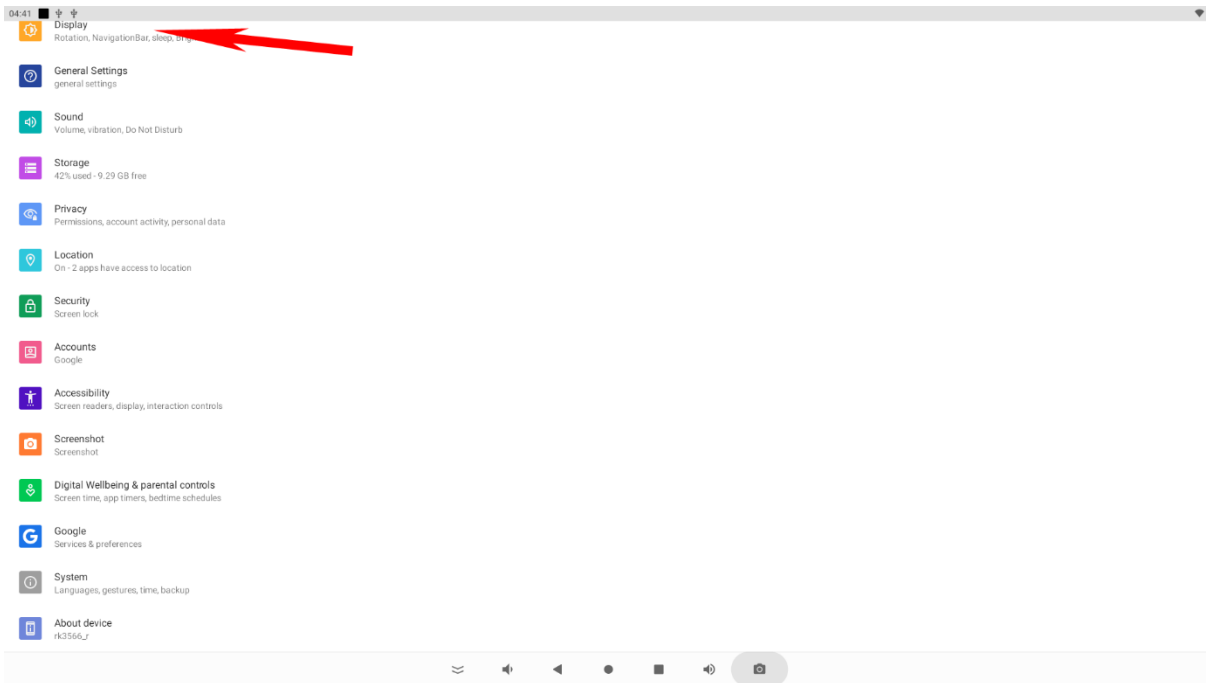


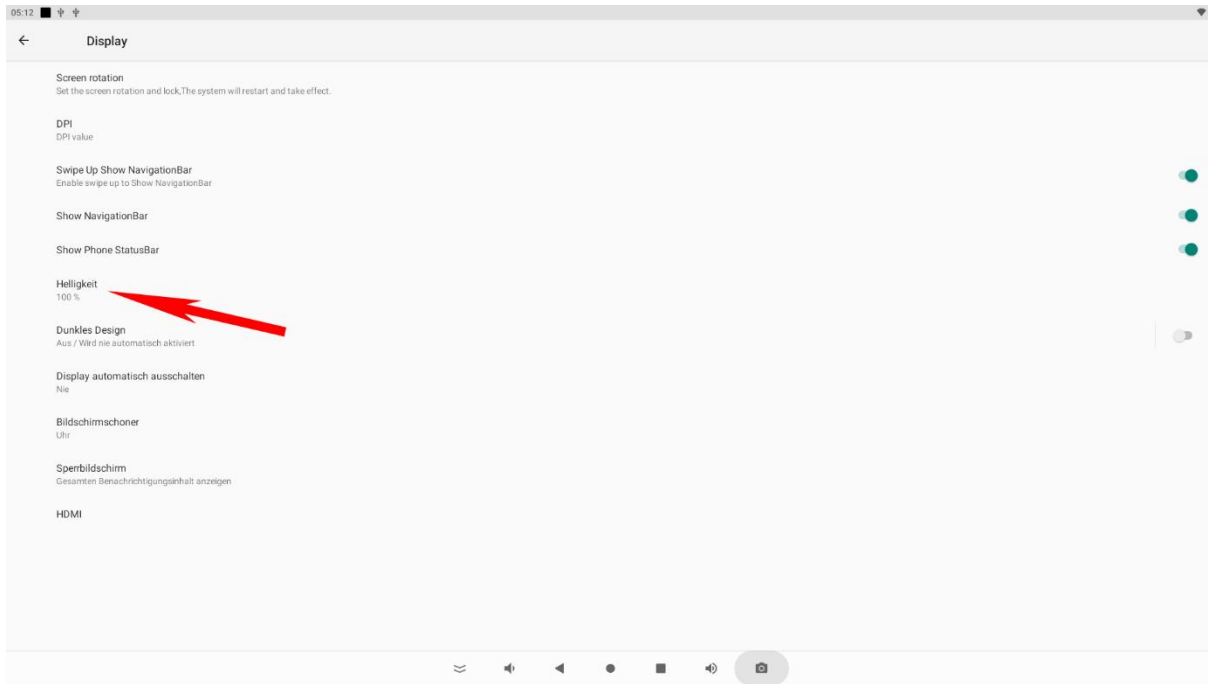

Hide navigation bar/status bar

Open the "Settings" app

 Select "Display", then switch off "Show NavigationBar/ or Phone StatusBar".


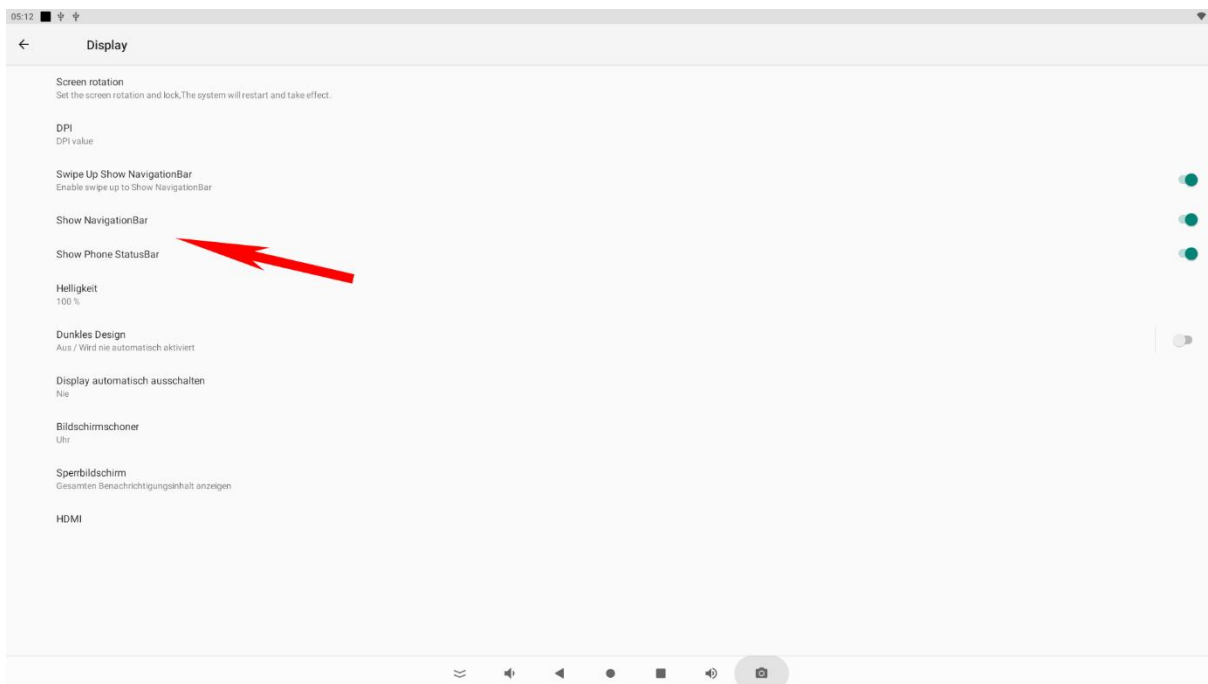


You can also operate the tablet with a mouse and keyboard. The left button is the "mouse click", the right mouse button is the "back" button

Settings "Switch display off automatically"

Open the "Settings" app

  
Select "Display", then click on Advanced/ Hibernate, now you can set the display switch-off time. By activating the "Never" menu item, the screen remains active until the tablet is switched off.

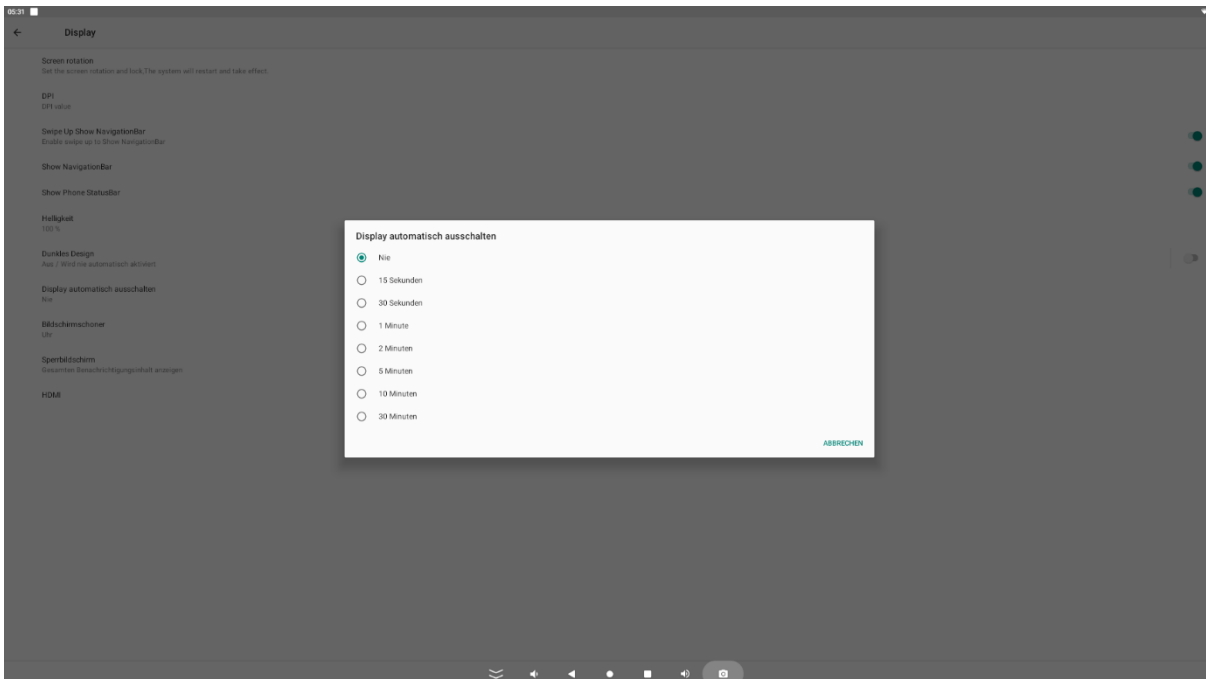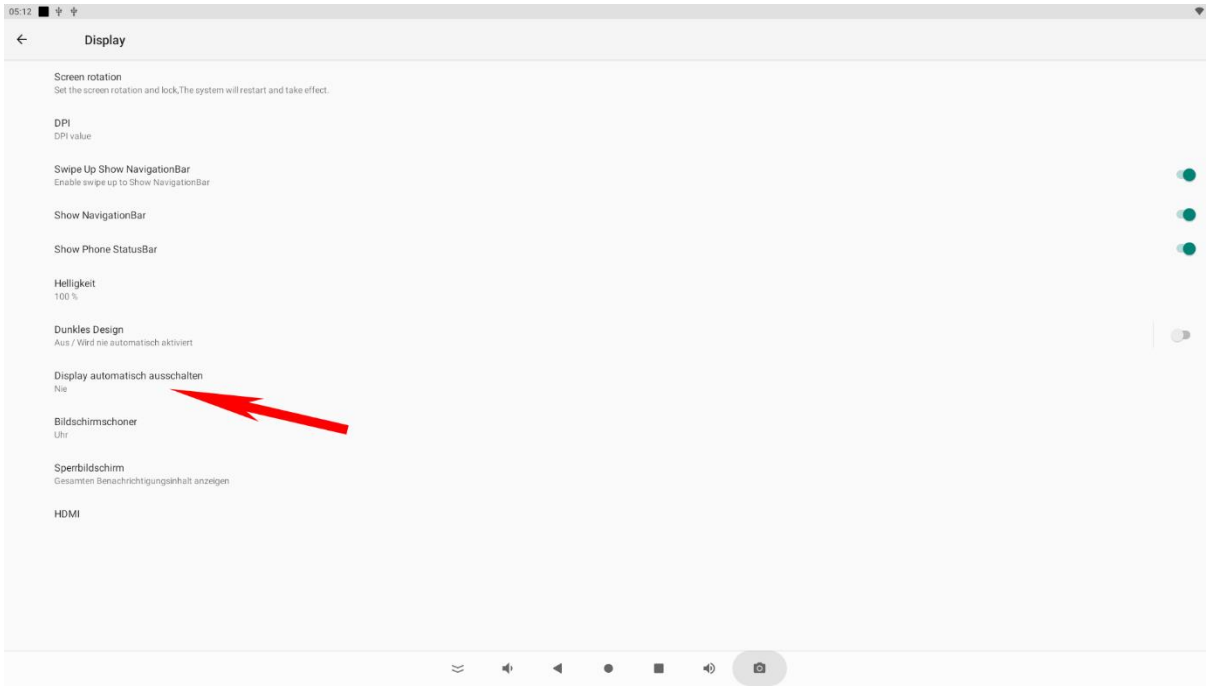

Connection to the Google Play Store



Open the Play Store app and log in with your Google account details to install the apps you want. If you do not yet have an account, you can create a new account directly via the app. If you have a

 problem starting the Play Store, a component (Google SystemWebView.apk) of the Google framework is out of date and needs to be updated. To do this, the Chrome browser must be deactivated under Settings/Apps so that SystemWebView.apk is visible. The tablet should update this automatically after some time, so leave it switched on and connected to the internet. This app can also be downloaded from external download sites such as APK Mirror. Please note that downloading from external sites can be risky. We assume no liability for this!

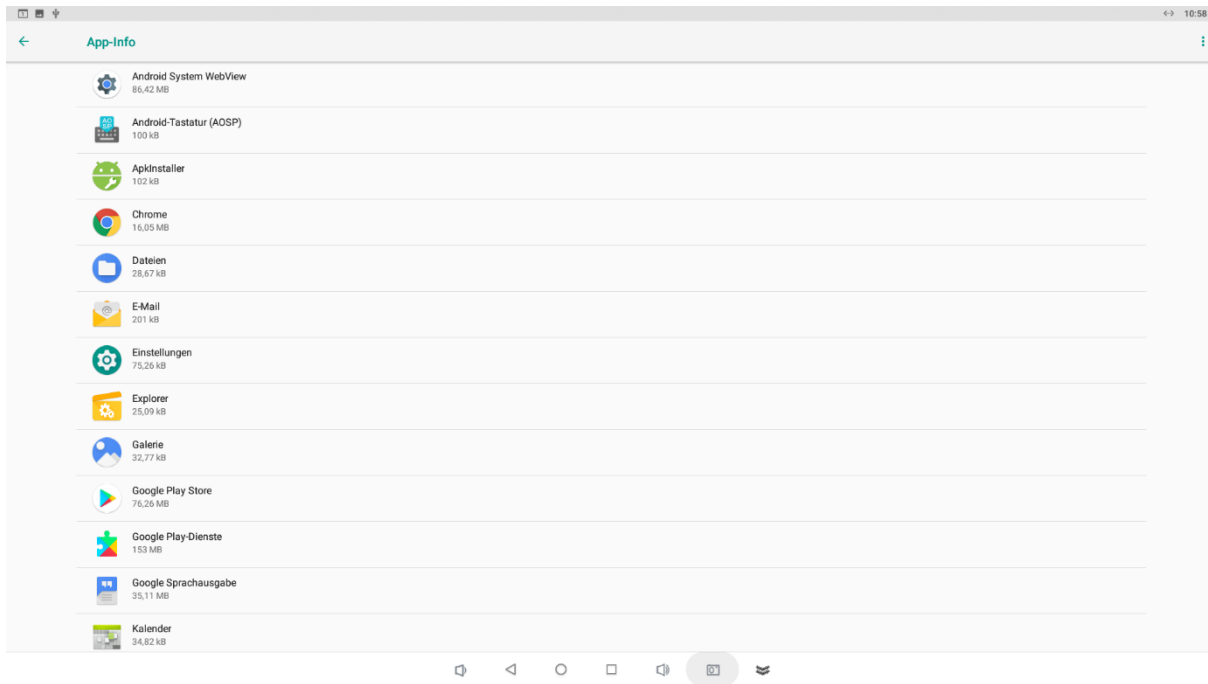

Exit app

  Click on the rectangular icon in the bottom navigation bar. You will then be shown all active apps, which you can then close as required.

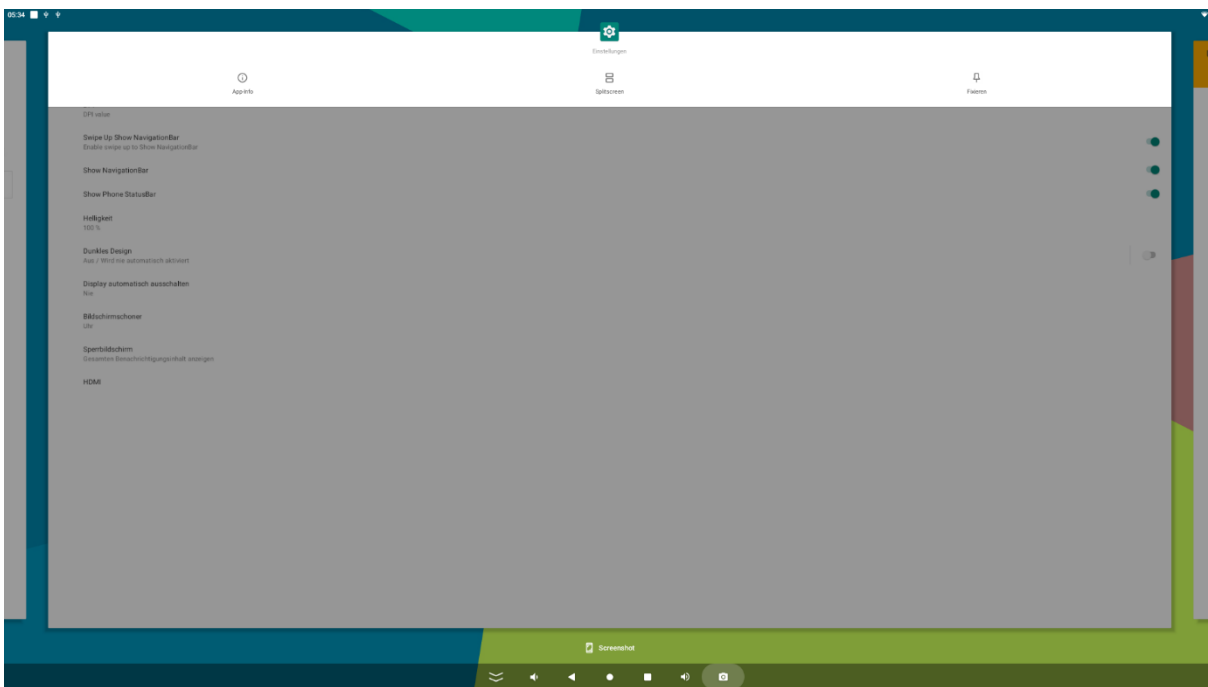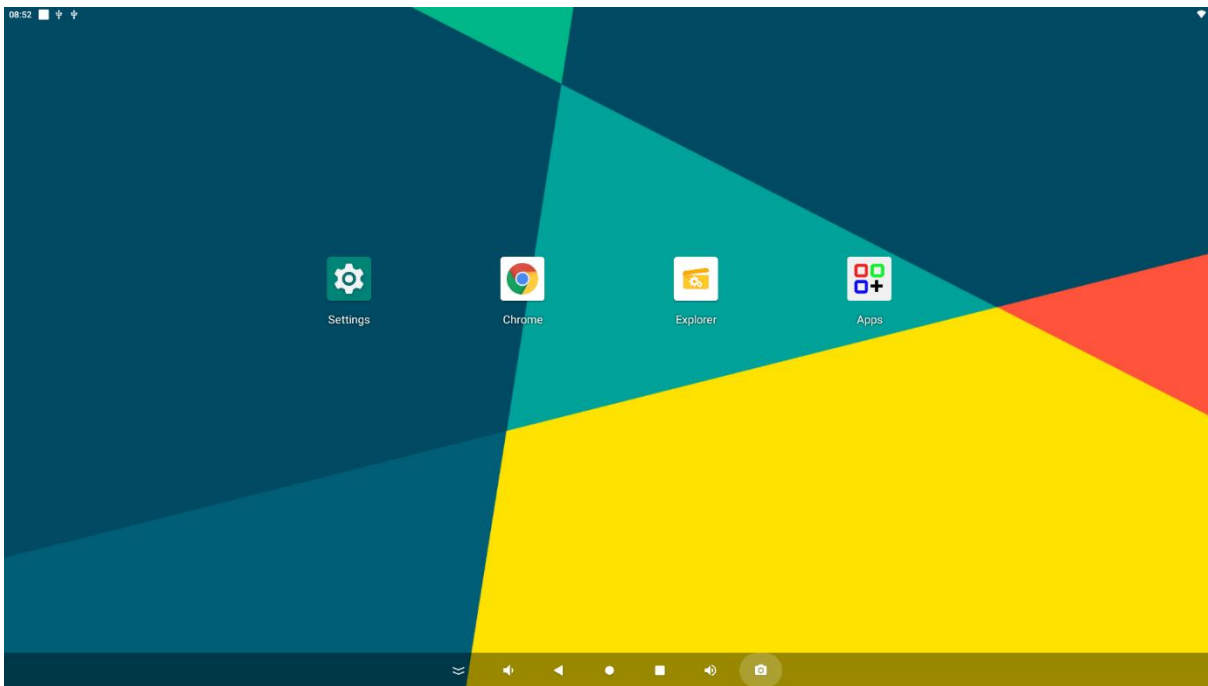

Split screen function:

This function is available to display two apps at the same time.

 
Click on the rectangular icon in the bottom navigation bar. All active apps will then be displayed. Click on the top logo in the middle of the app you want to use. A menu will open. Click on Split screen and select the second app by clicking on it. These must be opened beforehand so that you can select them.

 
Create screenshot

Under Settings you will find the item "Screenshot". Click to open a settings window.



You can activate the function in the navigation bar here.

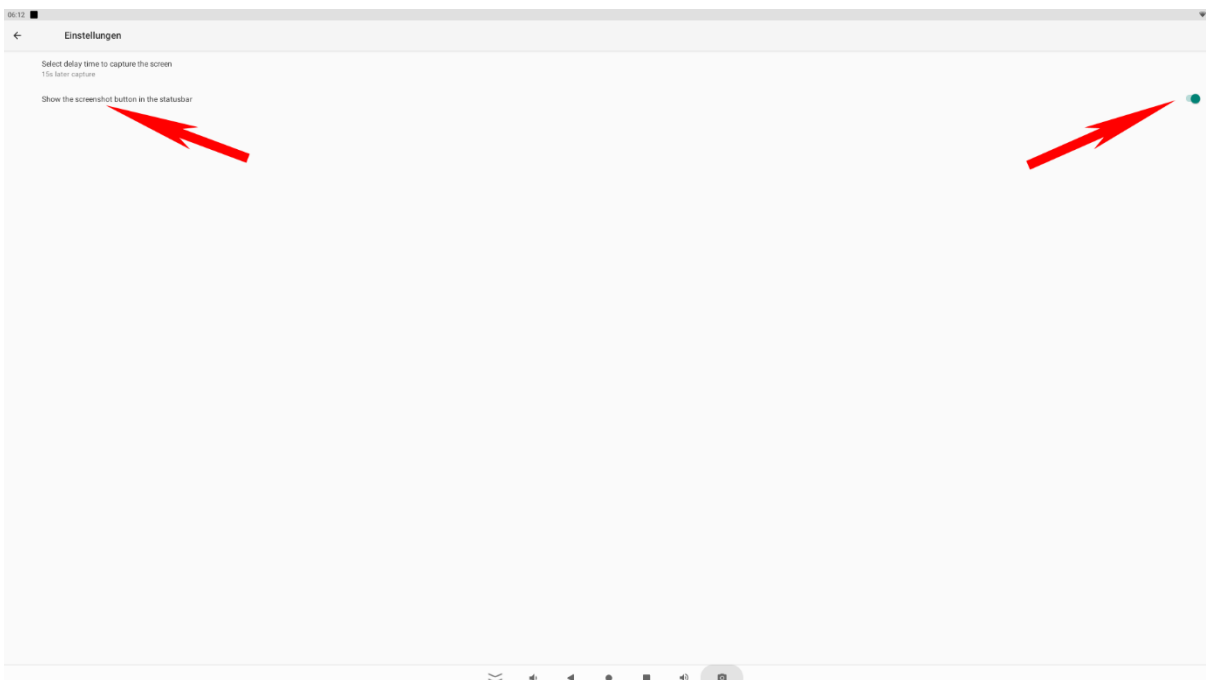

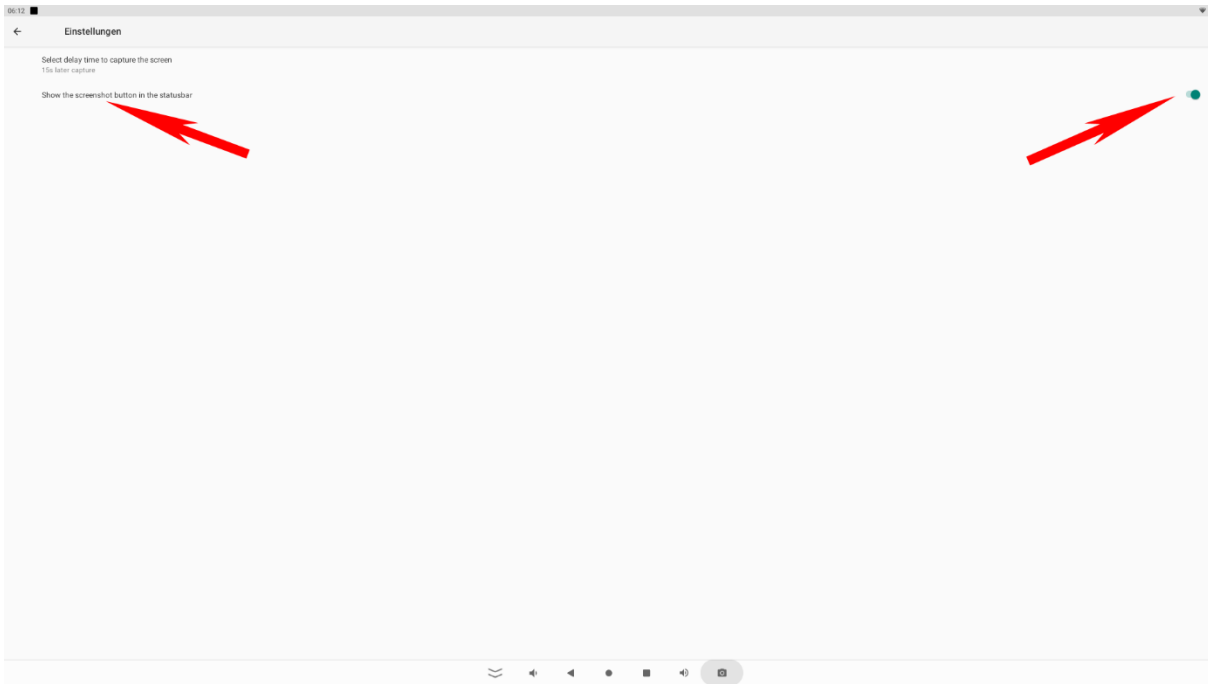

Update firmware:

To update the firmware, the tablet must be connected to the PC with a USB cable USB Type-A to Type-A connector. Before connecting it, please install the Rockchip drivers using the Rockchip DriverAssistant tool.

Note: Please check that no other ADB drivers are installed on the system. This can lead to errors in the recognition of the tablet.

To flash the firmware, you need the AndroidTool_Release v5.1.1. Please write to our support team to obtain the firmware and the download link, support@allnet.de.

Here are the individual steps:

1. install the "Release_DriverAssitant" driver.
2. start the Android tool
3. connect the USB port to the PC and the tablet and connect the power supply unit
4. you will now see an ADB device in the Android tool
5. press the Firmware button under the "Upgrade Firmware" tab and select the Linux/Android image
6. then press the "Switch" button
7. the tablet should now switch off the screen and there should be a loader device in the Android tool, takes approx. 30 sec. if this does not work, there is a small hole next to the power connection on the tablet. Use a bent paper clip to feel for the switch behind it and apply power at the same time. Press and hold the switch for approx. 3 seconds.
6. then press the "EraseFlash" button, only necessary in the event of errors or a system change
7. when the process is finished, you can click on the "Upgrade" button and the image will flash the Linux/Android onto the system.
8. the device restarts automatically after the update process.

CE

CE Declaration of Conformity



Germering, 19th of February, 2024

ALLNET High Performance Case Display 27 inch

Rocket 240 Suitcase



The safety advice in the documentation accompanying the products shall be obeyed.

The conformity to the above directive is indicated by the CE sign on the device. The

ALLNET **ALL-SDxxRK3588A12x/xG** conforms to the Council Directives of

2014/53/EU. This equipment meets the following conformance standards:

Safety: EN62368-1:2020+A11:2020

Health:ENIEC62311:2020

EMC:ETSIEN301489-1V2.2.3(2019-11)

ETSIEN301489-3V2.1.1(2019-03)

ETSIEN301489-17V3.2.4(2020-09)

EN55032:2015+A11:2020;EN55035:2017+A11:2020

ENIEC61000-3-2:2019;EN61000-3-3:2013+A1:2019

Radio:ETSIEN300328V2.2.2(2019-07)

ETSIEN301893V2.1.1(2017-05)ETSIEN300440V2.2.1(2018-07)

This equipment is intended to be operated in all countries.

This declaration is made by

ALLNET GmbH Computer Systems

Maistraße 2

82110 Germering

Germany

Germering, 19.02.2024


Wolfgang Marcus Bauer
CEO