Mi · Light® User Instruction

9W RGB+CCT LED Downlight

Model No.: FUT061

Features



RGB+CCT
16 Millions of colors to choose



Color temperature 2700~6500K



Dimmable saturation control



2.4G RF wireless transmission technology



Support amazon alexa voice control Mi-Light WiFi remote is needed



Smart phone APP control Mi-Light WiFi iBox or WiFi remote is needed



Remote control control distance 30m









Parameters

Model No.: FUT061

Power: 9W

CRI: >80

PF: >0.5

Beam Angle: 120°

Material: Aluminum

 
Input Voltage: AC100~240V 50/60Hz

Color Temperature: 2700K~6500K

Luminous Flux: 720LM

Light Efficiency: 80LM/W Lifespan: 50000 hours


Hole Size: ø110~125mm Control Distance: 30m



Hole Size: ø110~125mm

Instructions

- 1. Please open the hole on the ceiling according to the correct size of Diagram 1.
- Connect the driver properly according to the wire connection Diagram 2. And then put the driver and wire into the ceiling from the hole.
- 3. Push in the two spring elements, make sure that they are deployed and anchored on the back of the ceiling Diagram 3 and 4.

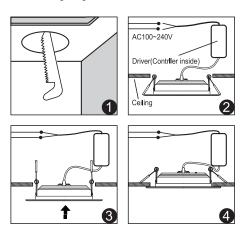

Link / Unlink

Compatible with these remote controls (Purchased separately)











⚠ NOTE:

Lighting can be working after linking with remote; for more details, pls read the remote instruction.

Attention

- To reduce the risk of electric shock, please ensure the power is not connected when you install the downlight.
- Notice! Amateurs do not disassemble or install the lamps. If the light is damaged, please seek professional electrical assistance, or please discard the light.
- Lamp installation must be correct and strict, solid and reliable, avoid long time using in violent vibration place.
- The lamps send out normal quantity of heat during working. Please don't use any cover to cover the body of the lamps.